


PosiCharge[™] PosiLink Cloud Connection User Guide

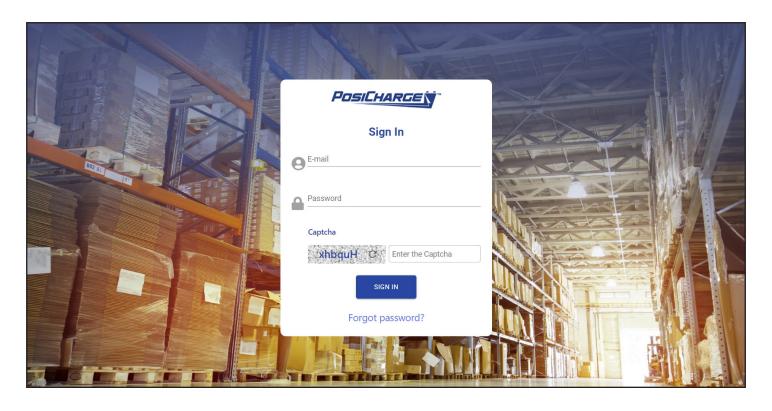

© Ampure 2024. All rights reserved.

PosiCharge™ systems is a product line of Ampure and the Ampure logo are trademarks of Ampure. Corporate names, trademarks, registered trademarks, service marks, symbols, and logos stated herein are property of their respective companies. Specifications are subject to change without notice. Images of the power cycling and test systems are representative; production models may vary. No portion of these materials may be duplicated, used, or disclosed without prior written permission from Ampure.

Disclaimer: this manual includes the latest information available at the time of printing. Ampure reserves the right to make changes to this manual and/or product without further notice. Changes or modifications to this product not completed by an authorized service provider could void the product warranty.

These commodities, technology or software were exported from the United States in accordance with the Export Administration Regulations. Diversion contrary to US law prohibited.

https://www.posicharge.com/

CONTENTS

INTRO	ODUCTION
	Hardware Requirements
	Acronyms, Abbreviations, and Symbols
	User Types – Definitions
	User Types – Access Levels
	Going Forward
WEB	PORTAL
	Log In Window
	Landing Page
	Left-Side Menu
	Dashboards
	Dealer Dashboard Summary
	Company Dashboard Summary
	Location Dashboard Summary
	Site Dashboard Summary
	Locations Box
	Sites Box
	Users Box
	Devices Box
	Battery Management
	Column Selector
	Operation Status
	Alerts – Weekly Issues
	Location Management
	Locations List
	Sites
	Organization Management – Organization List
	Division Management – Division List
	User Management
	Account Management
	Users List

REPORTING	MANAGEMENT
Repor	ts
	Battery SOC (State of Charge) Report
	Battery Temperature
	Daily Usage Report
	Plug In Compliance Report
	Warranty by Time Report
	Remaining Life Report
	Consumption by Ahrs
	Consumption by kWhrs
	Equivalent Battery Utilization
	Run Time vs Ah Report
	Weekly Issues Report
	Weekly Issues Report 2
	Battery History Report
	Lifetime Battery History Report
	Charge Summary
	Configuration Summary Report
	Equalization Summary
	Battery Rx Units
	Shift Schedules
	Daily Battery Performance
	Battery Statistics
Logs	
	Equalization Log
	Charge Log
	Battery History Log
	E-Meter Log
	Configuration Log

INTRODUCTION

PosiCharge[™] PosiLink is an easy way for warehouse personnel to manage and measure energy use. The cloud-based business intelligence platform helps you protect your energy investments all in one place.

PosiLink manages all your charging systems in one, simple, and user-friendly interface that lets you know immediately when interventions should be made with the following features.

- Battery Management
- Operation Status
- Alerts
- Location Management
- User Management
- Reporting Management
- Organization Management
- Dealer Portal

Hardware Requirements

Hardware	Specifications
Ethernet	100 Mbps, RJ45 connector
Onboard memory	32G of disk space
Temperature settings	−40°C to 60°C
Wi-Fi connectivity	802.11b/g/n

Acronyms, Abbreviations, and Symbols

Acronym or Abbreviation	Meaning
Арр	Application
b/g/n	Wi-Fi (wireless) technology
BMID	Battery Monitor and Identifier
CEC	California Energy Commission
CRUD	Create, Read, Update and Delete
G	Gigabyte(s)
ID	Identification
ioT	Internet of Things
kWh	Kilowatt Hour(s)
Mbps	Megabits Per Second
Wi-Fi	Wireless networking technology that uses radio waves to provide high-speed network and internet connections.

User Types – Definitions

Platform User	Access to all dealers, all companies, all locations, and all sites
Dealer User	Access to the assigned dealer and all companies, all locations, all sites (under the assigned dealer)
Company User	Access to the assigned company and all locations and sites (under the assigned company)
Location User	Access to the assigned location and all sites (Under the assigned location)
Site User	Access to the assigned site

User Types – Access Levels

User	All Dealers	Assigned Dealer	All Companies	Assigned Company	All Locations	Assigned Location	All Sites	Assigned Site
Platform Admin				CU	RD			
Dealer Admin	✓	CURD						
Dealer Manager	✓		R					
Company Admin	✓	✓	✓	CURD				
Company Manager	✓	✓	✓			R		
Location Admin	✓	✓	✓	✓	✓		CURD	
Location Manager	✓	✓	✓	✓	✓		R	
Site Admin	✓	✓	✓	✓	✓	✓	✓	CURD
Site Manager	✓	✓	✓	✓	✓	✓	✓	R

Going Forward:



Select the **Apply** button to apply any selections and changes to make to any given page.



Select the **Refresh** button to refresh the data on any given page.




Select the **Export** button to export data to the email address you set up under User Management > Account Management > Account Profile.

WEB PORTAL


Log In Window

- 1. On your computer, open your browser and go to [URL].
- 2. Type in your user email address and your password.
- 3. A Captcha security code will appear in the gray box as illustrated below type that same security code into the white box to the right of it.

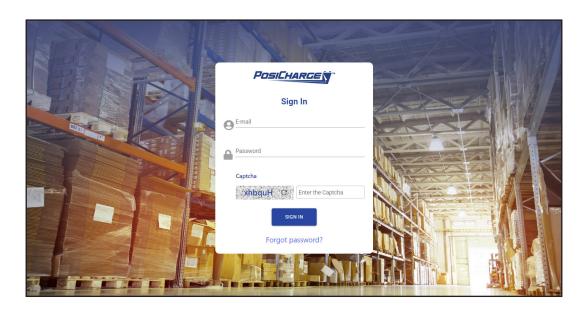

Landing Page

After logging in, the site opens to the Dealer Dashboard, which is the first time listed on the left-side menu.

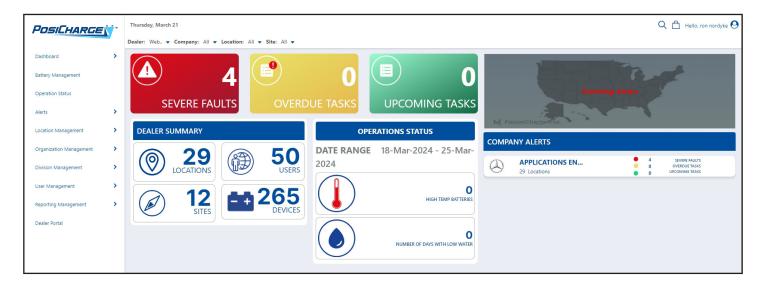


Left-Side Menu

The left-side menu consists of sub-menus.

NOTE:


The Dashboard selected on the left-side menu determines what is shown on the right-side dashboard – see the following pages for examples.

LEFT-SIDE MENU

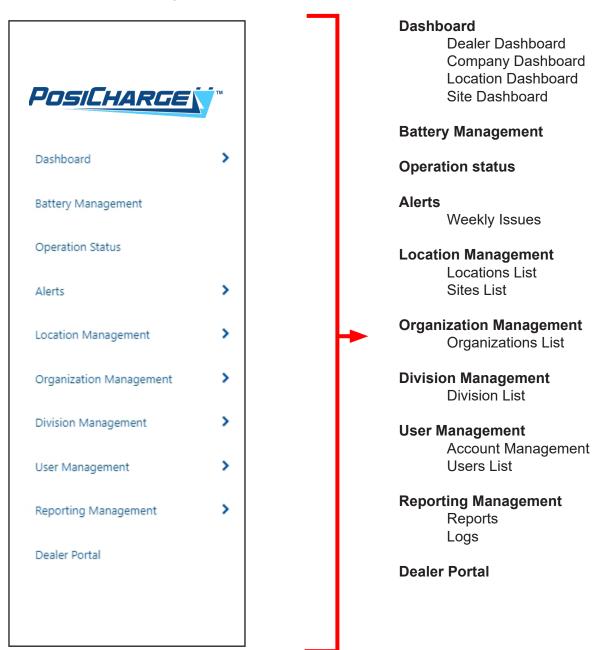


Dashboards

Depending on your user permissions, the landing page displays one of four dashboards, with Dealer Dashboard having the most permissions and access, and Site Dashboard having the fewest permissions and access:

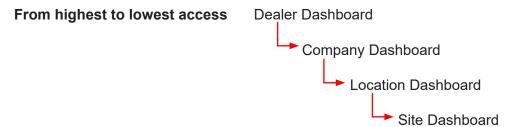


The Dealer Dashboard, Company Dashboard and Location Dashboard are very similar as shown below – the difference are <u>based on the level of user access</u> as shown on the following pages.

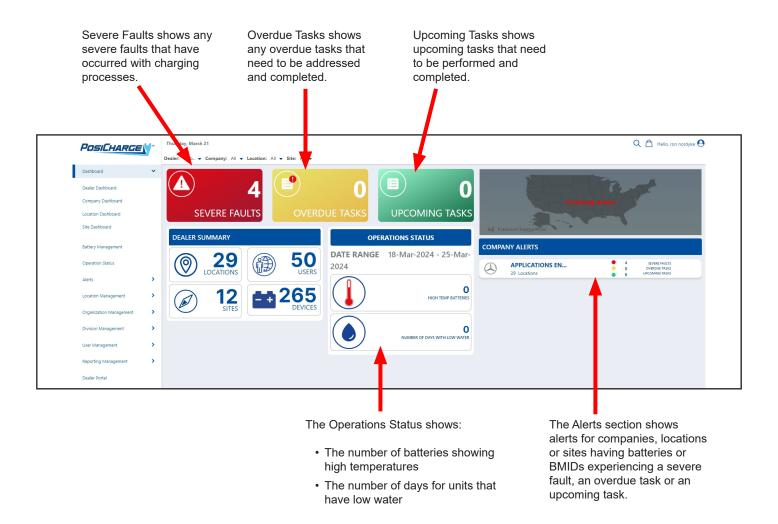

The Summary section in the Dealer Dashboard, Company Dashboard and Location Dashboard are also similar – the differences are <u>based on the level of user access</u> as shown below.




Dealer Dashboard Summary

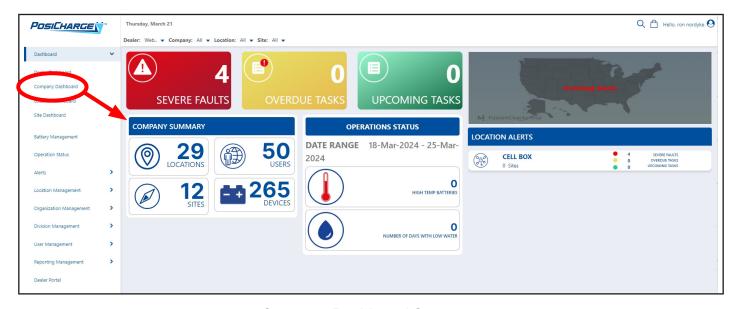

Company Dashboard Summary



Location Dashboard Summary

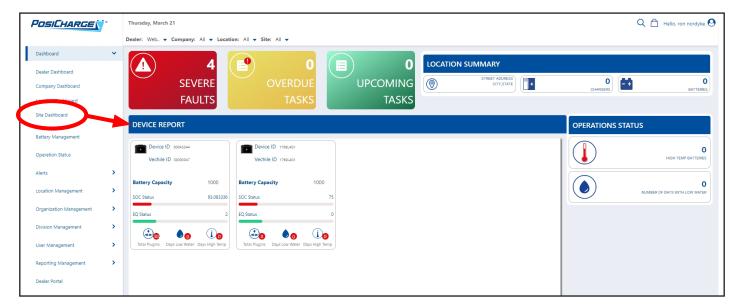


Site Dashboard Summary


Locations Box

Select this display a list of all locations in the PosiLink network.




- Sort the information by selecting the up or down arrows above each column.
- Select the pencil icon to update a location.
- Select the garbage icon to inactivate a location.

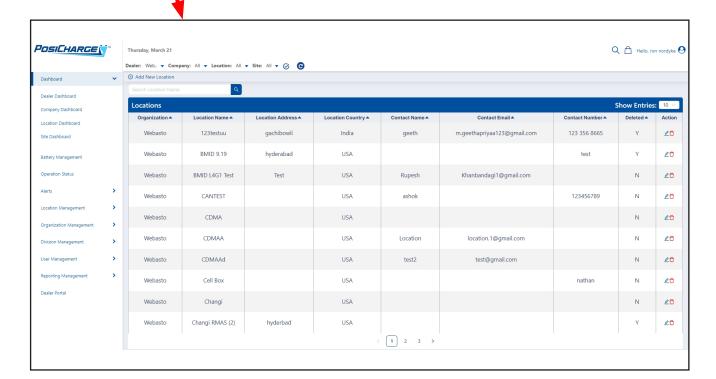

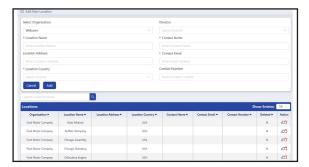



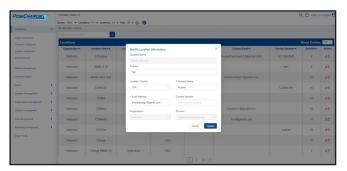


Update a Location


Sites Box

Select this to display a list of all sites in the PosiLink network.



- · Sort the information by selecting the up or down arrows above each column.
- · Select the pencil icon to update a site.
- Select the garbage icon to inactivate a site.

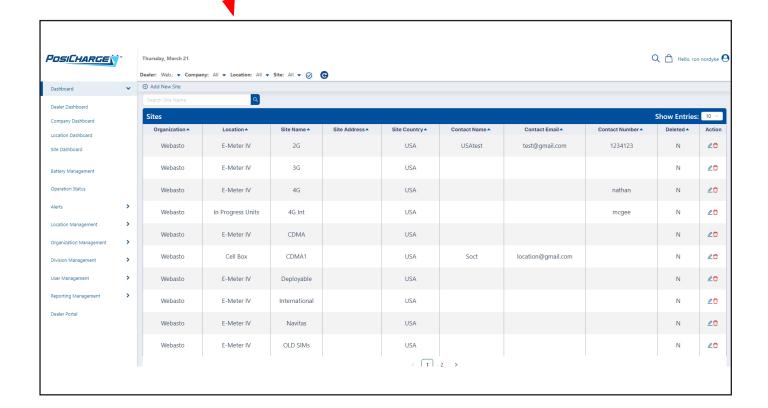

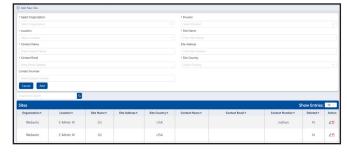


Add a New Site




Update a Site

Users Box

Select this to display a list of all users in the PosiLink network.

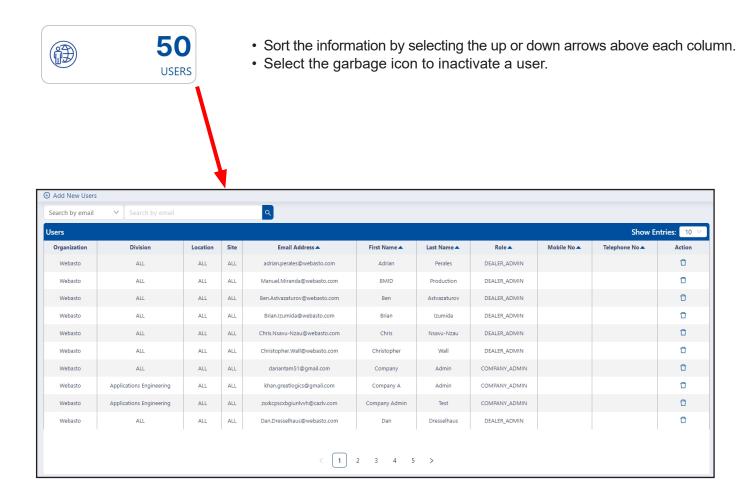

Add a New User

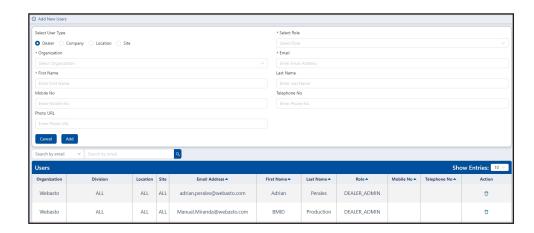


Devices Box


Select this to display a list of all devices in the PosiLink network.



The Devices box simply reveals how many devices are connected to the system. To see detailed information for the devices, select the **Battery Management** tab on the left side of the page.

When the Battery Management page opens, you can sort the data according to 23 different columns – see the next page for more information.

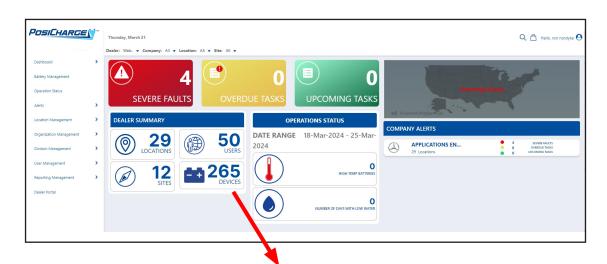

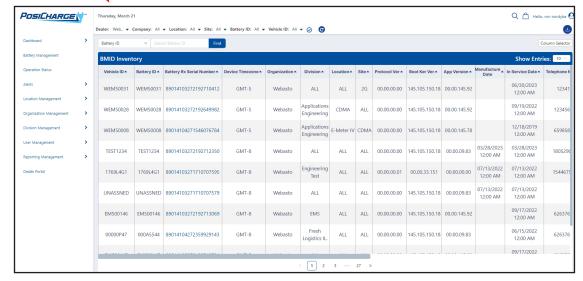


Battery Management

Select this from the left-side to display the following items:


Vehicle ID	Site	Enabled Y/N
Battery ID	Protocol Version	Enabled Date
Battery Rx Serial Number	Boot Ker Version	E-Meter Identifier
Battery Rx SIM #	App Version	E-Meter Session ID
Device Time Zone	Manufacturer Date	Contract Start Date
Organization	In-Service Date	Contract End Date
Division	Telephone Number	Date Updated
Location	Last Contact Date	

Any of these columns of information can be sorted alphabetically from A to Z or from the lowest to the highest number.

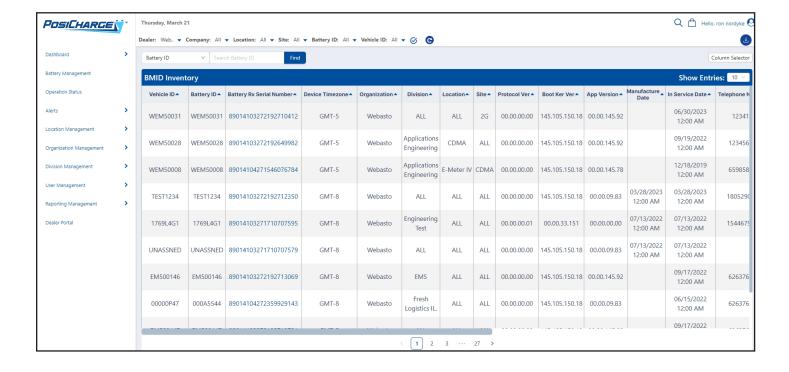

Column Selector


Select this from the top-right corner of the page to display or hide columns by selecting or deselecting the check boxes.

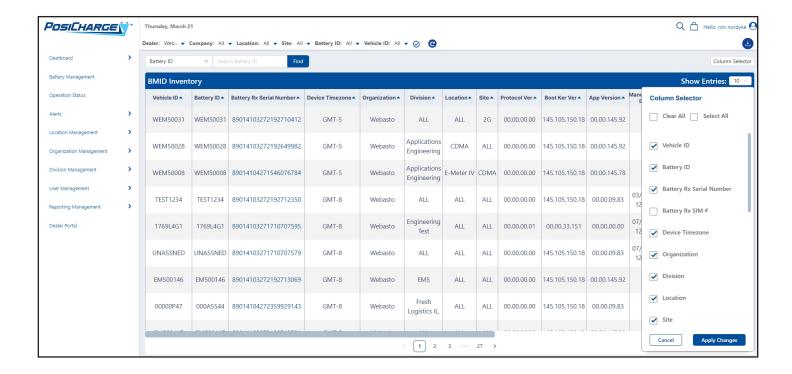


Operation Status

Select this from the left-side to display the operation status report.


This includes the option to sort the data by high temperature report, amp-hours charged, EQ overdue dates and times, and lower water status.

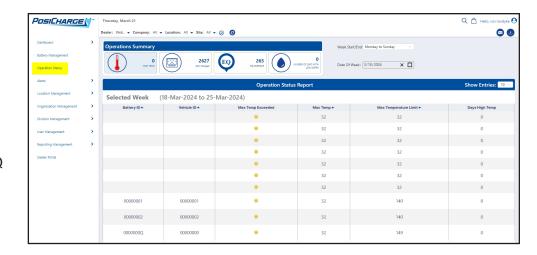

You can also select the number of entries to be displayed.

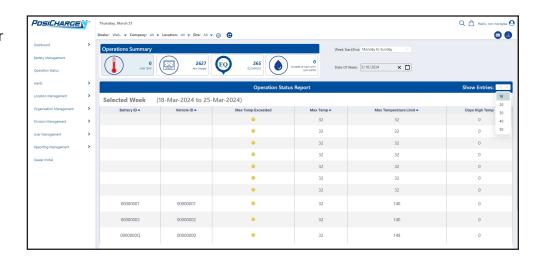


And you can choose which day of the week you want to show as the start of the display.

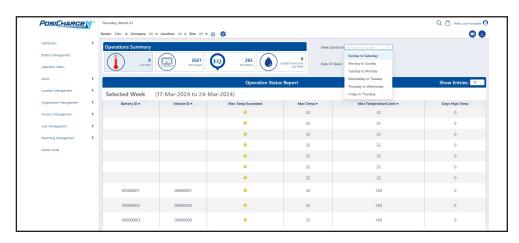

Alerts - Weekly Issues

Select this from the left-side menu displays any Weekly Issues that might be of concern.

You can select the date range – or set a custom date range – from the top-right corner of the page.

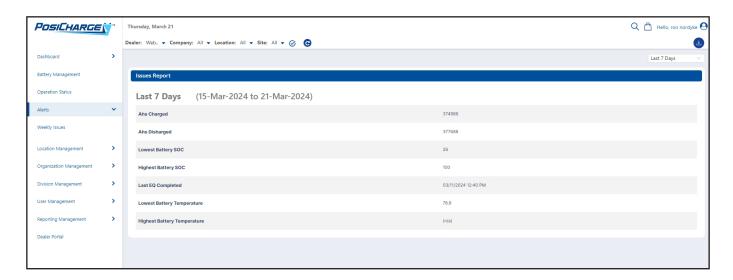


Location Management

Locations List

Select this to display the list companies and their addresses where they have active BMIDs on the PosiLink network.


- Select **Add New Location** on the top-left side of the page to add a new location.
- Select the pencil icon to update a location.
- Select the garbage bin icon to inactivate a location.
- Select the up or down arrows at the top of any given to sort the list alphabetically.

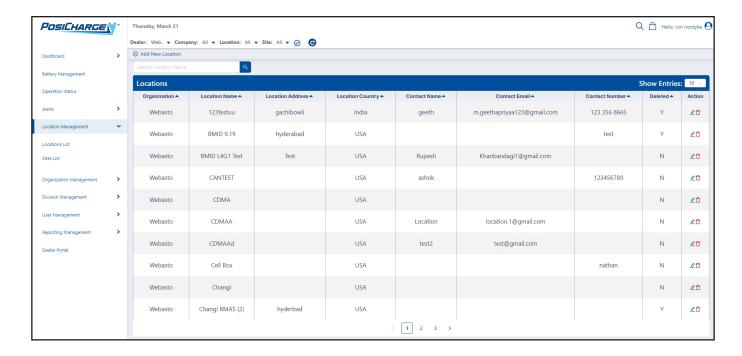

Sites

Select this to display a list of specific sites where BMIDs are connected to the PosiLink network.

- Select Add New Site on the top-left side of the page to add a new site.
- · Select the pencil icon to update a site.
- Select the garbage bin icon to inactivate a site.
- Select the up or down arrows at the top of any given column to sort the list alphabetically.

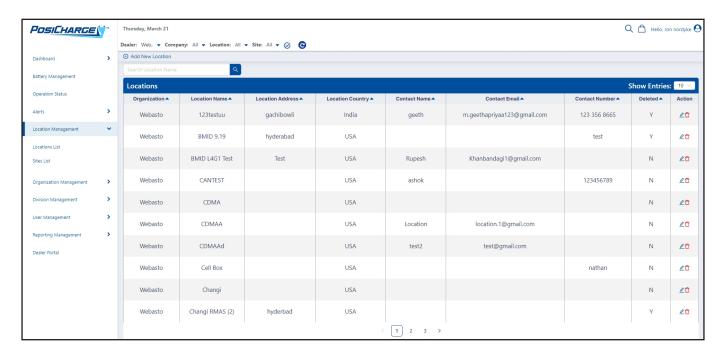

Organization Management – Organization List

Select this to display a list of all organizations in the PosiLink Network.

- Sort the information by selecting the up or down arrows above each column.
- Select Add New Organization on the top-left side of the page to add a new organization.
- · Select the pencil icon to update an organization.
- Select he garbage bin icon to inactivate an organization.
- Select the return key arrow to map an organization.



Division Management - Division List

Select this to display a list of all divisions in the PosiLink Network.

- Sort the information by selecting the up or down arrows above each column.
- Select Add New Division on the top-left side of the page to add a new division.
- Select the pencil icon to update an division.
- · Select he garbage bin icon to deactivate an division.



User Management


Account Management

Select this to display your Account Profile and Account Settings.

Under Account Profile, you can:

- Change the name on the account
- · Change the primary email address
- · Elect to receive a weekly operation status report via email
- Elect to receive a weekly operation status report via alternative email.

When you're finished updating the information on the page, select **Apply Changes**.

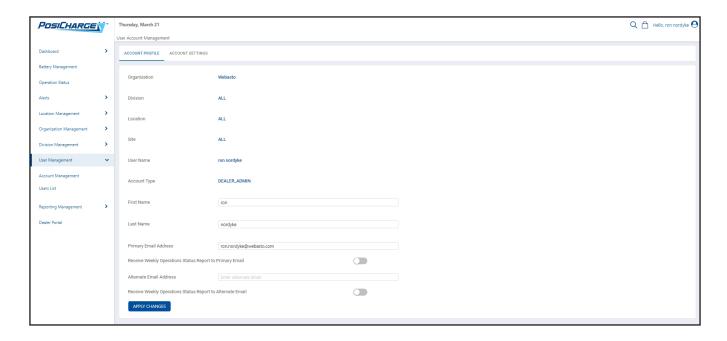

Under Account Settings, you can display your account profile and the account settings. Under this setting, you can:

- · Enable automated email alerts
- Select battery fault alert categories
- Select battery fault alert types
- · Enable charge fault alerts
- · Add an email address where these alerts will be delivered


When you're finished making your selections, select **Apply Changes**.



Users List

Select this to display users who are registered in the PosiLink network.

- Select **Add New Users** at the top-left corner of the page to add a new user.
- Select the top-left drop-down to sort the information by first name, last name or by email.
- Type the email of the user you're searching for in the box to the right and select the magnifying glass icon.
- Select the up or down arrows at the top of any given to sort the list alphabetically.
- Select the garbage bin icon to inactivate a site.

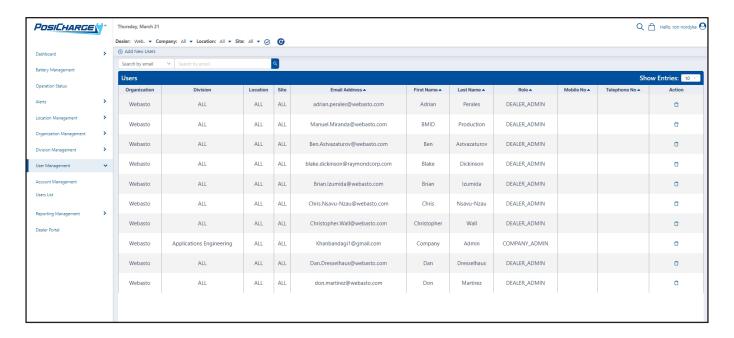


REPORTING MANAGEMENT

Reports


Selecting this displays 22 different options:

Battery SOC Report	Battery Temperature Report	Daily Usage Report	Plug-In Compliance Report
Warranty by Time Report	Remaining Life Report	Consumption by Ahrs	Consumption by kWhrs
Equivalent Battery Utilization	Run time vs Ah Report	Weekly Issues Report	Weekly Issues Report 2
Battery History Report	Lifetime Battery History Report	Charge Summary	Configuration Summary Report
Equalization Summary	Battery Rx Units	Battery Rx Test Page	Shift Schedules
Daily Battery Performance	Battery Statistics		

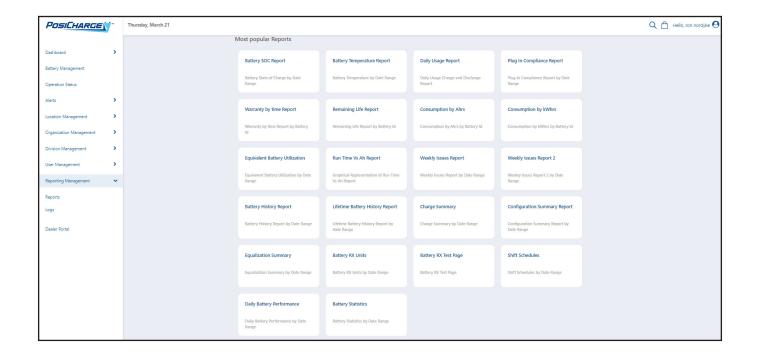

Battery SOC (State of Charge) Report

Select this display a graph showing the state of charge for batteries in the PosiLink network. On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.

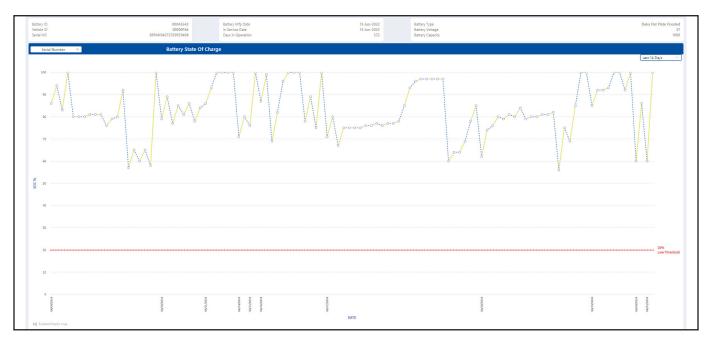

Battery Temperature


Select this to display a graph showing the temperature of the batteries in the PosiLink network. On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.



Daily Usage Report

Select this to display graphs showing the total number of amp hours in, amp hours out and over/under charge.


- On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.
- Select the yellow, blue and red buttons as shown below to show or hide data.

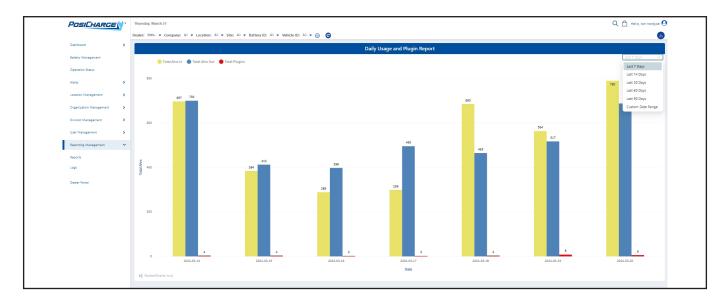

Plug In Compliance Report

Select this to display a graph showing if batteries are meeting plug in compliance.

On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.

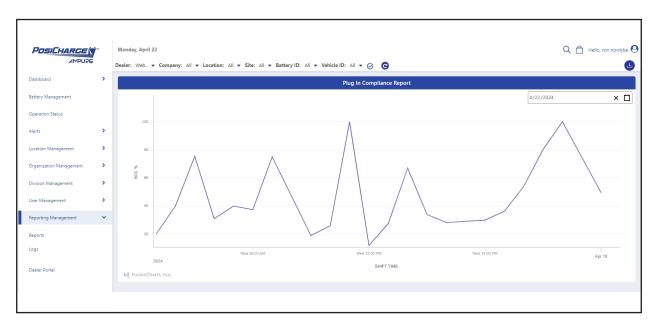

Warranty by Time Report

Select this to display a graph showing the estimated time remaining on a battery warranty, the time that has already elapsed on the warranty, and any over-warranty period.

Select the yellow, blue and red buttons as shown below to show or hide data.



On the upper-left corner of the page, you can sort the graph by time...



Or you can sort the graph alphabetically (from A to Z).



Remaining Life Report

Select this to display a graph showing the remaining life of batteries in the PosiLink network.


- Select the yellow and blue buttons to show or hide data.
- You can also select **Sort by Estimate Life Remaining** from the upper-left corner of the page.



Consumption by Ahrs

Select this to display a graph showing how many amps hours each battery has consumed.


- Select the red, blue and yellow buttons to show or hide data.
- You can also select **Sort by Elapsed Ahrs** or by **Sort by A to Z** on the upper-left corner of the page.

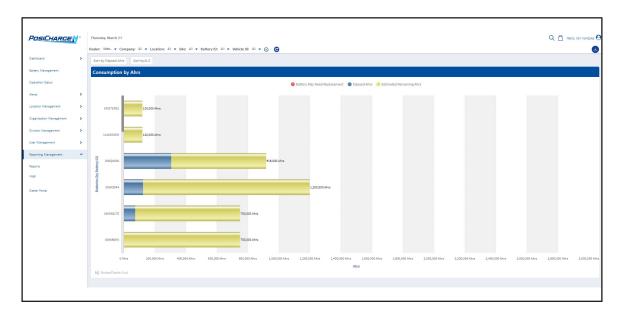

Consumption by kWhrs

Select this to display a graph showing which batteries may need to be replaced, elapsed kilowatt hours, and the estimate remaining kilowatt hours.


- On the upper left corner of the page, you can sort data according to elapsed kilowatt hours or alpha-numerically.
- Select the red, blue and yellow buttons to show or hide data.

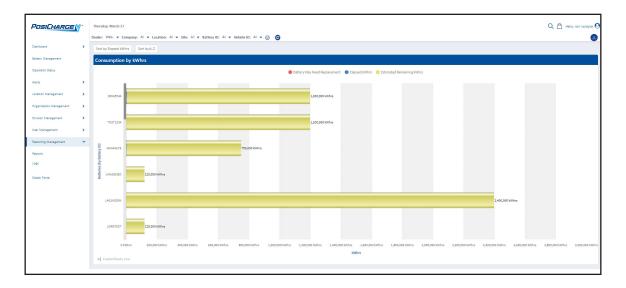

Equivalent Battery Utilization

Select this to display battery equalization by date range.


- At the top, you can sort the data by Dealer, Company, Location, Site, Battery ID or Vehicle ID.
- At the top-right corner, you can also customize the date range.

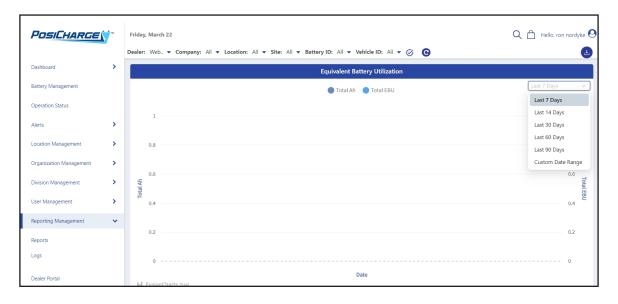

Run Time vs Ah Report

Select this to display a graph of run time vs an Ah report.

- Select the blue or yellow buttons to show or hide the AH and/or the run time.
- AT the top-right corner, you can customize the date range.

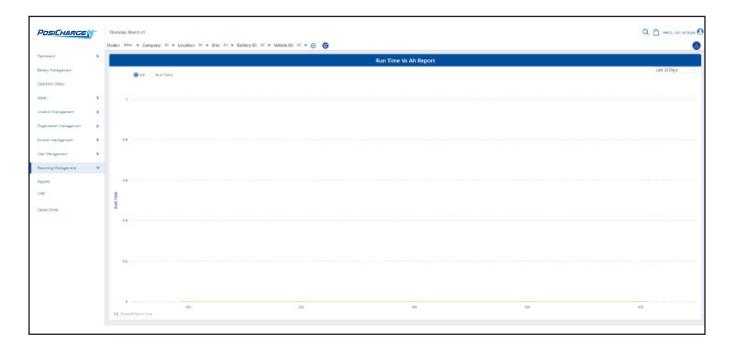

Weekly Issues Report

Select this to display:

Ahrs Charged	Highest Battery SOC	Lowest Battery Temperature
Ahrs Discharged	Last EQ Completed	Highest Battery Temperature
Lowest Battery SOC		

On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.



Weekly Issues Report 2

Select this to display:

Battery	Severity Type	Date
Connected Chargers	Code	Time

On the upper right-corner of the page, you can select the number of days to display in the graph, or you can select a custom date range.



Battery History Report


Select this to display:

Battery ID	Total Charge Ahrs	Organization
Vehicle ID	Average Temp	Division
Battery Rx SIM	Days High Temp Events	Location
Serial Number	Last EQ Comp Date	Site
IPC Fast Charge Plugins	# of Comp EQs	Log Time Stamp
Plug-in Hours	Total Discharge Ahrs	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, **Battery Rx SIM #**, or **Serial Number**, then type the information for your selection in the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

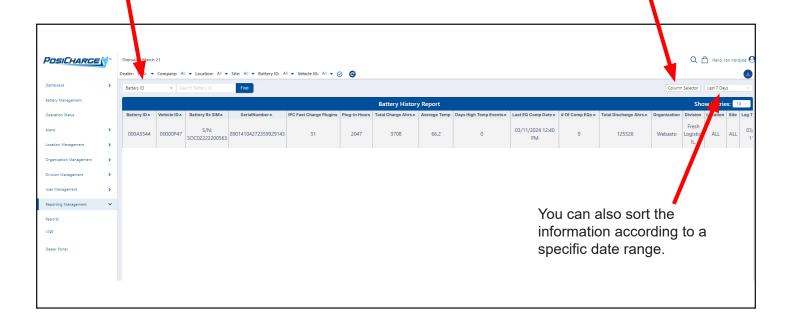

Lifetime Battery History Report


Select this to display:

Battery ID	Total EQ Hrs	Cumul Disch Ahrs	Remain Batt Life (based on Warranty)
Vehicle ID	Tot Comp EQ Events	Cmul Disch Kwh	Remain Batt Life (based on Ahrs)
Battery MFG Serial Number	Days Last Comp EQ	Cumul Run Time	Rated Batt Capacity
Firmware Rev	Last Comp EQ Date	Cumul Key On Time	Est Batt Capacity
Init Date	Max Rec Days Betw EQ	Cumul Key Off Time	Number of Days with Low Water
Days in Op	Max Rec Ahrs Betw EQ	Cumul Cg Time	Organization
Data as of	Low Volt Events	Cumul Idle Time	Division
Total Charge Events	High Volt Events	Days w/ High Temp Events	Location
Cumul Ahrs Charged	Min Rec Voltage	Min Rec Temp	Site
Cumul Kwh Charged	Max Rec Voltage	Max Batt Temp	
Min Batt SOC	Nom Batt Volt		
Max Batt SOC			

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, or **Battery MFG Serial Number**, then type the information into the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check bokes.

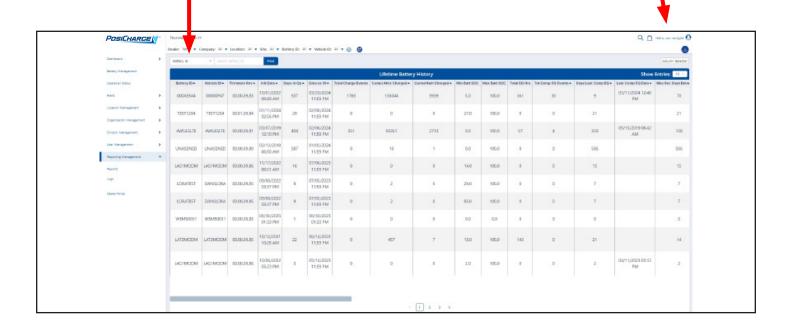

Charge Summary


Select this to display:

Battery ID	Total Run Hours	Total Chg Evts	Organization
Vehicle ID	Total Idle Hours	Avg Dly Usage	Division
Battery Rx SIM	Ave Temp	Avg Dly Chg Hours	Location
Battery Capacity	Max Temp	Avg Dly Idle Hours	Site
Charge Ahrs	Min SOC	Avg Dly Run Hours	Date Stamp
Tot Chg Hours	Avg Init SOC	EBUs	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select Battery ID, Vehicle ID, or Battery Rx SIM, then type the information into the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

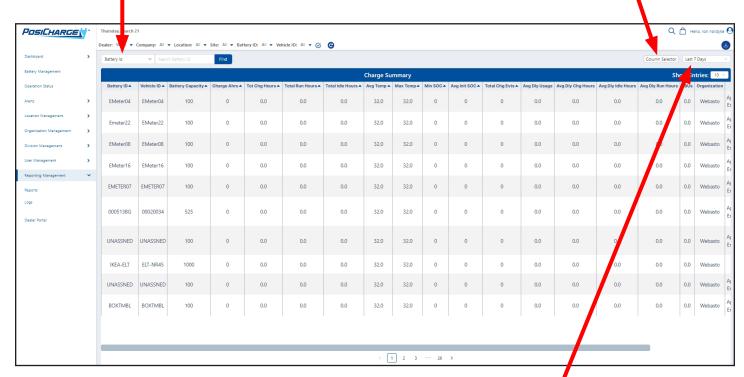

Configuration Summary Report


Select this to display:

Battery ID	Max Ahrs Btw EQs	Key On Det	Low °C Lmt
Vehicle ID	Max Days Btw EQs	Key On Logic	Max Charge Curr Limit
Battery Rx Serial Number	EQ Start Day	Key On Curr	Max Days Since Compl EQ
Battery Rx SIM #	EQ Start Time	Parasitic Curr	Pack V Imbal Limit
Date/Time	EQ End Day	GMT Offset	EQ Curr Range
Battery Type	EQ End Time	Daly Call Time	Max Day Btw Chg
Total Cells	Internal Resistance	Low SOC Lmt	Organization
Capacity	Tarq Volt Limit	High Volt Lmt	Division
Start Curr Limit	Temp Fbk	Low Volt Lmt	Location
SOC Limit	Run Time Curr Thresh	High °C Lmt	Site

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, **Battery Rx SIM**, or **Device Serial Number**, then type the information in the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

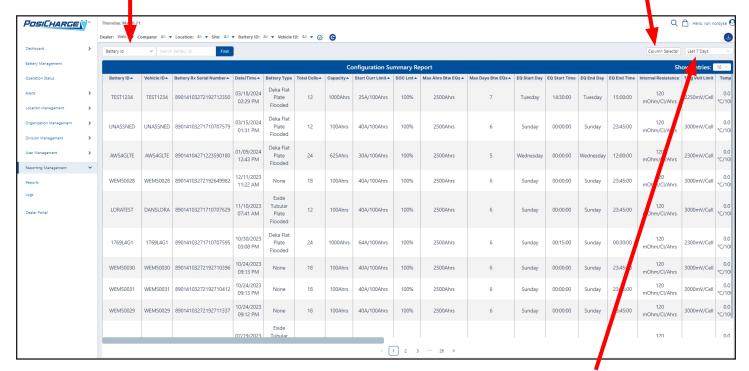

Equalization Summary


Select this to display:

Battery ID	Comp EQ Events	Days Since Comp EQ	Location
Vehicle ID	Non-Posi EQ Events	Total Comp EQ Events	Site
Battery Rx SIM #	Non-Posi EQ Hours	Last Comp EQ Date	Log Time Stamp
Days in Op	Max Ahrs Betw EQs	Organization	
EQ Hours	Max Days Betw EQs		

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, or **Battery Rx SIM**, then type the information into the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

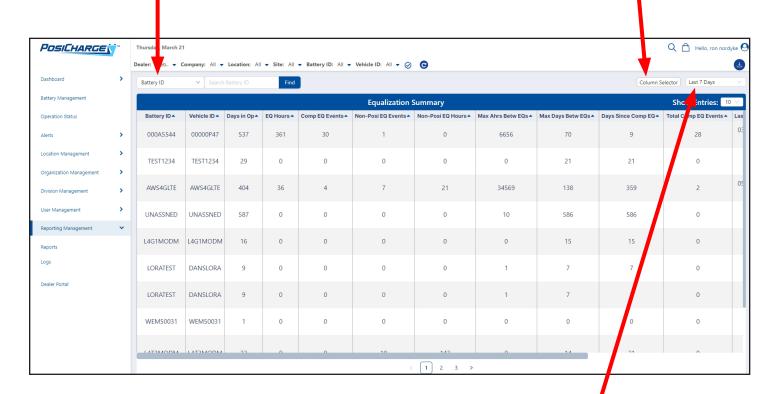

Battery Rx Units


Select this to display:

Battery ID	Location	Telephone Number	E-Meter Session ID
Vehicle ID	Site	Last Contact Date	Date Contract Start
Battery Rx Serial Number	Protocol Ver	Last Complete Date	Date Contract End
Battery Rx SIM #	Boot Ker Ver	Enabled	Date Updated
Device Timezone	App Version	Enabled Date	
Organization	Manuf Date	Is E-Meter	
Division	In Svc Date	E-Meter Identifier	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Battery Rx Serial Number**, **Battery Rx SIM #**, **Vehicle ID**, **App Version**, or **Enabled**, then type in the information in the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

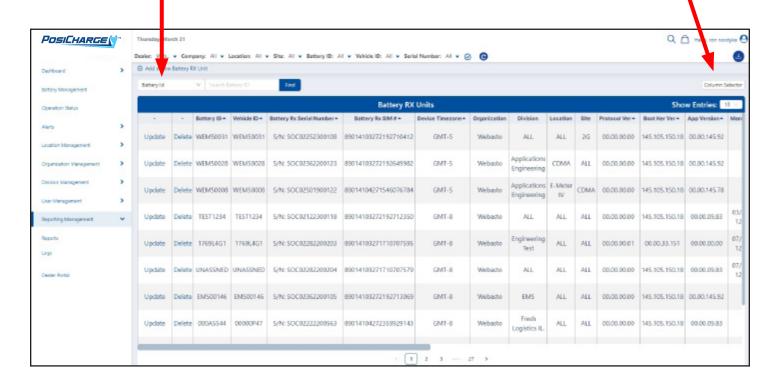

Shift Schedules

Select this to display:

Organization	Building	Shift 3 Enabled
Division	Shift 1 Enabled	Last Updated
Location	Shift 2 Enabled	Action

- Select **Add a New Shift Schedule** on the upper-left corner of the page to add a new schedule.
- Select the up or down arrows at the top of any given column to sort the list alphabetically.
- Select the pencil icon on the right to modify a shift schedule.
- · Select the garbage bin icon to delete a schedule.










Modify an Existing Shift Schedule

Daily Battery Performance

Select this to display:

Battery ID	Key On Hours	Date Min Batt Volt	Non-Posi Fst Chg Hours
Vehicle ID	Key Off Hours	Min Batt Volt @Amps	Non-Posi EQ Hours
Battery Rx SIM #	Run Hours	Date Max Disch Amps	Non-Posi Ahrs
Log#	Full Chg Comp	Max Disch Amps @Volt	Date Max Imbal Volt
Date	EQ Comp	Low Water Today	Max Pack Imbal Volts
Posi Charge Ahrs	Min Batt SOC	Fault Code 1	Division
Disch Ahrs	Max Batt SOC	Fault Code 2	Location
Disch kWh	Max Batt Temp	Fault Code 3	Site
Posi Fast Chg Hours	Min Batt Temp Date	Non-Posi KWh	Date Updated
Posi Full Chg Hours	Min Batt Temp	Posi Fast Chg Evts	
Posi EQ Hours	Avg Batt Temp	Non-Posi Fst Chg Evts	
	Date Min Batt Volt	Non-Posi Fst Chg Hours	


Select the up or down arrows at the top of any given column to sort the list alphabetically.

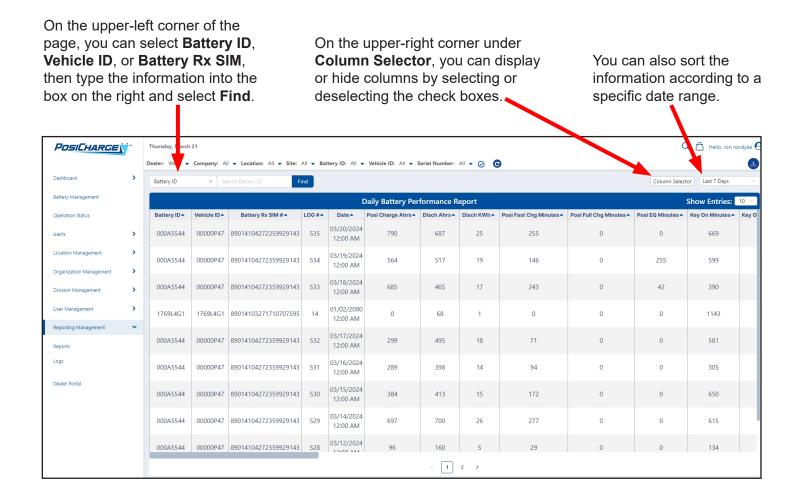

Battery Statistics

Select this to display battery statistics by date range.


- At the top of the page, you can sort the data according to Dealer, Company, Location, Site, Battery ID, Vehicle ID or Battery Rx SIM#.
- In both the State of Charge and Usage Summary graphs, you can select buttons to show or hide data.

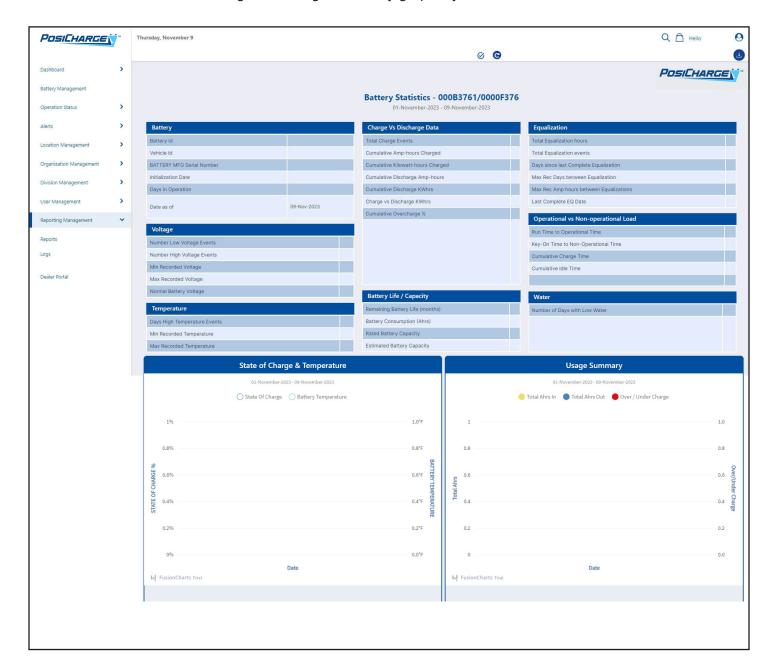

Logs

Selecting **Logs** displays five options:

Equalization Log	Charge Log	Battery History Log	E-meter Log
Configuration Log			

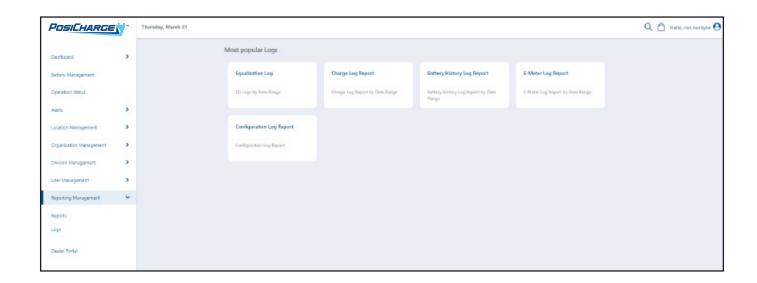

Equalization Log


Select this to display:

Battery ID	End Date	Days Since Last Comp EQ
Vehicle ID	Charge Type	Organization
Battery Rx SIM #	Start Code	Division
Log #	Term Code	Location
Start Date	Ahrs Returned	Site

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, or **Battery Rx SIM**, then type the information in the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

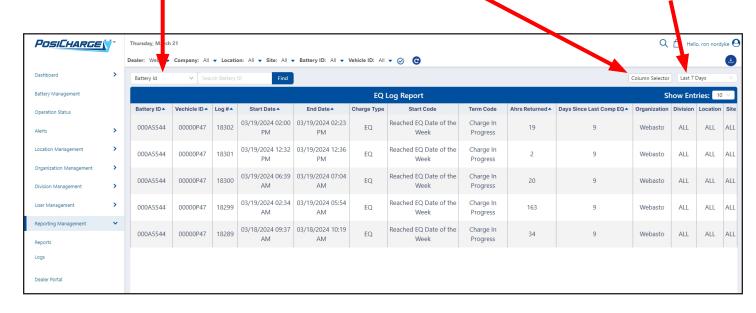

Charge Log


Select this to display:

Battery ID	Charger ID	Charge kWhr	End Volts	Start Volt Pack Unbal
Vehicle ID	Port	Start Temp	Max Curr	End Volt Pack Unbal
Battery Rx SIM	Start Date/Time	End Temp	End Curr	Organization
Battery Type	End Date/Time	Start SOC	Charge Type	Division
Total Number of Cells	Duration Hours	End SOC	Start Code	Location
Battery Capacity	Charge Ahrs	Start Volts	Term Code	Site
Log #				

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, or **Battery Rx SIM**, then type the information into the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

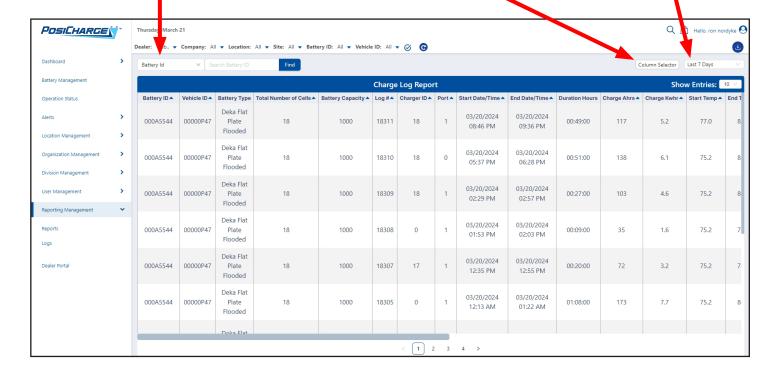

Battery History Log


Select this to display:

Battery ID	Non-Posi kWh	Key On Hrs	Max Rec Volt
Vehicle ID	Posi Fast Charge Hrs	Key Off Hrs	Number of High Volt Evts
Battery Rx SIM	Posi Fast Charge Evts	Min Battery Temp	Max Rec High Temp
Log#	Posi Full Charge Hrs	Avg Battery Temp	Days High Temp Events
Date/Time	Posi Full Charge Evts	Days with Low SOC	Days Low Temp Events
Initialize Date	Posi EQ Hrs	Max Recorded Daily Disch Ahrs	Last Comp EQ Date
Days in Operation	Posi EQ Events	Num Days with Low Water	Last Charge Date
Cumulative Ahrs Charged	Non-Posi Chrg Hrs	Max Rec Ahrs Btw EQs	Firmware Rev
Cumulative kWh Charged	Non-Posi Chrg Evts	Max Rec Days Btw EQs	Organization
Cumulative Disch Ahrs	Non-Posi EQ Hrs	Days Since Last Comp EQ	Division
Cumulative Disch kWh	Non-Posi EQ Events	Number Comp EQ Evts	Location
Non-Posi Ahrs	Run Hours	Min Rec Volt	Site
		Number of Low Volt Evts	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

On the upper-left corner of the page, you can select **Battery ID**, **Vehicle ID**, or **Battery Rx SIM**, then type the information into the box to the right and select **Find**.

On the upper-right corner under **Column Selector**, you can display or hide columns by selecting or deselecting the check boxes.

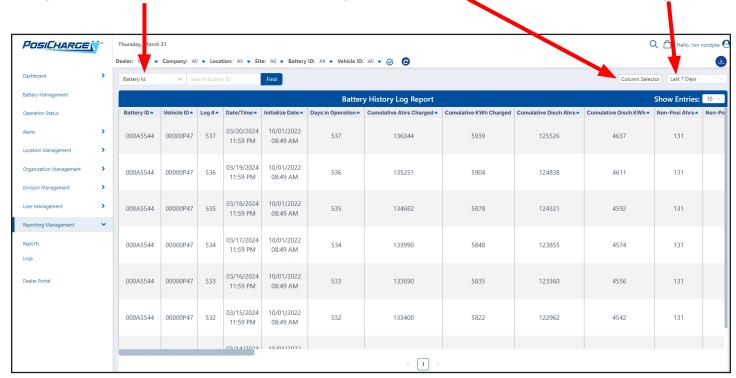


E-Meter Log

Select this to display:

Battery ID	CSQ	Discharge Whrs
Vehicle ID	Current	Battery Rx SIM #
E-Meter Session ID	Voltage	
Timestamp	Charge Ahrs	
Temperature	Discharge Ahrs	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

As shown below, there are several options you can select on this page, which are described in more detail on page 48.

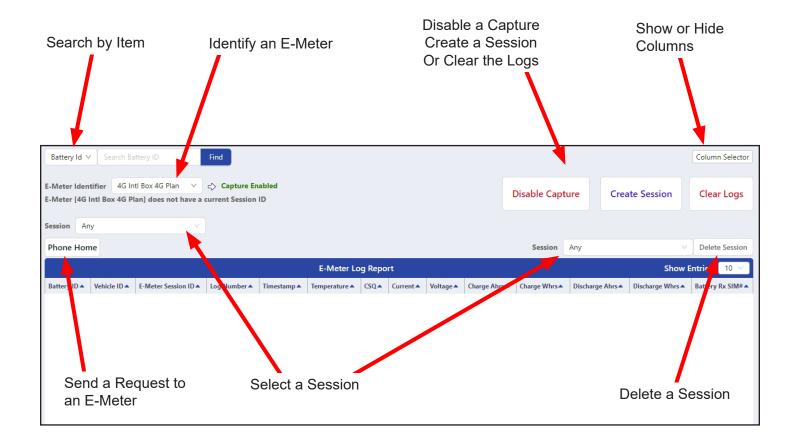

On the upper-left corner you can select one of the following items, then select **Find**.


- Battery ID
- · Battery Rx SIM #
- E Meter Session ID
- Charge Ahrs
- · Charge Whrs
- CSQ
- Discharge Ahrs
- · Discharge Whrs
- · Log Number
- Temperature
- Vehicle ID
- Voltage

On the upper-left corner, you can select the **Session**.





To the right of E-Meter Identifier, you can select plan.

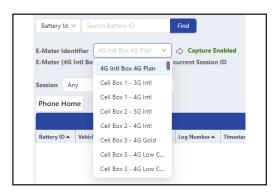


You can also select the **Session** on the upper-right corner of the page, or you can **Delete a Session**.



Select **Column Selector** on the upper-right corner of the page to show or hide columns



Select the **Phone Home** button to send a request to an E-Meter.

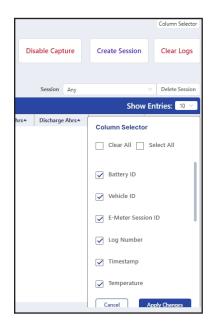


Configuration Log

Select this to display:

Battery ID	Max ahrs Btw EQs	Key On Det	Max Charge Curr Limit
Vehicle ID	Max Days Btw EQs	Key On Logic	Max Days Since Compl EQ
Battery Rx Serial Number	EQ Start Day	Key On Curr	Pack V Imbal Limit
Battery Rx SIM	EQ Start Time	Parasitic Curr	EQ Curr Range
Log#	EQ End Day	GMT Offset	Max Day Btw Chg
Date/Time	EQ End Time	Daily Call Time	Organization
Battery Type	Internal Resistance	Low SOC Lmt	Division
Total Cells	Tarq Volt Limit	High Volt Lmt	Location
Capacity	Temp Fbk	Low Volt Lmt	Site
Start Curr Limit	Run Time Curr Thresh	High °C Lmt	Date Updated
SOC Limit		Low °C Lmt	

Select the up or down arrows at the top of any given column to sort the list alphabetically.

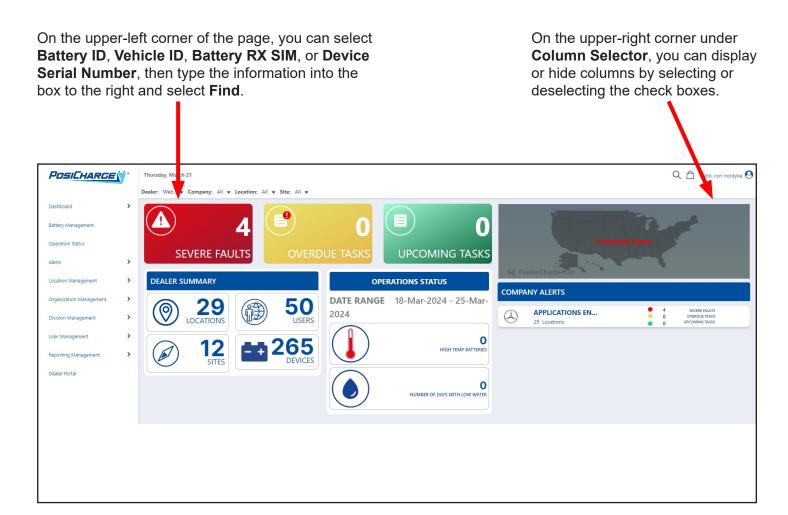

PosiCharge Ampure 1333 S. Mayflower Ave., Suite 100 Monrovia, CA 91016 USA