

# Installation Manual

GSE Intelligent Fast Charging Systems  
DVS100 / DVS150



English

© 2019 Webasto Charging Systems, Inc. All rights reserved.

PosiCharge™ systems is a product line of Webasto Charging Systems, Inc. Webasto and the Webasto logo are trademarks of Webasto Charging Systems, Inc. Corporate names, trademarks, registered trademarks, service marks, symbols, and logos stated herein are property of their respective companies. Specifications are subject to change without notice. Images of the power cycling and test systems are representative; production models may vary. No portion of these materials may be duplicated, used, or disclosed without prior written permission from Webasto Charging Systems, Inc.

Disclaimer: this manual includes the latest information available at the time of printing. Webasto Charging Systems, Inc. Reserves the right to make changes to this manual and/or product without further notice. Changes or modifications to this product not completed by an authorized service provider could void the product warranty.

These commodities, technology or software were exported from the United States in accordance with the Export Administration Regulations. Diversion contrary to US law prohibited.

PosiCharge™ systems, a product line of Webasto Charging Systems, Inc..  
1.866.767.4242 | [info@posicharge.com](mailto:info@posicharge.com) | [@posicharge](https://www.posicharge.com) | [posicharge.com](https://www.posicharge.com)



800 Royal Oaks Drive, Suite 210 - Monrovia, CA 91016 - U.S.A.  
Telephone (626) 415-4000

Mod. 7.3.9 Rev.4 del 06/02/2018

## DECLARATION OF CONFORMITY



### THE MANUFACTURER

Company: **BorgWarner Systems Lugo S.r.l**  
Address: **Via Mensa 3/2**  
City: **S. Maria in Fabriago – Lugo**

ZIP Code: **48022**

Province: **RA**  
Country: **Italy**

### DECLARES THAT THE MACHINES

Series Names: **Posicharge SVS-80** (Product No. 10865)  
**Posicharge SVS-100** (Product No. 11000)  
**Posicharge SVS-200** (Product No. 10850)  
**Posicharge SVS-300** (Product No. 10855)

Description: **Industrial Battery Chargers for Electric Vehicles and Machineries**  
Manufactured in: **S. Maria in Fabriago – Lugo**

### COMPLY WITH THE DIRECTIVES

- **2014/35/EU** "Low Voltage Directive" of the 26th February 2014
- **2014/30/EU** "Electromagnetic Compatibility Directive" of the 26th February 2014

### HARMONIZED STANDARDS:

- **EN 60335-1:2012** "Household and similar electrical appliances – Safety Part 1: General requirements"
- **EN 60335-2-29:2004/A2:2010** "Household and similar electrical appliances – Safety Part 2: Particular requirements for battery chargers"
- **EN 61000-6-2:2005;** "Generic standards – Immunity for industrial environments"
- **EN 61000-6-4:2007/A1:2011** "Generic standards – Emission standard for industrial environments"

### DATE

06<sup>th</sup> February 2018

### THE MANUFACTURER

Andrea Bassi  
General Manager – BorgWarner Systems Lugo S.r.l

BorgWarner Systems Lugo S.r.l **Indirizzo:** Via Mensa 3/2, 48022 S. Maria in Fabriago - Lugo (RA) - Italy  
**Tel** +39 0545 995008 **Fax** +39 0545 995006 **Website:** [www.bassi.eu](http://www.bassi.eu) **E-mail** [info@bassi.eu](mailto:info@bassi.eu)  
**P.IVA/CF** – 02512370392 **N°REA:** RA – 208575 **Indirizzo PEC:** [info.bassi.srl@pec.it](mailto:info.bassi.srl@pec.it)

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****Table of Contents**

1	Getting Started .....	5
2	Safety Precautions – Read before using .....	5
2.1	Symbol usage.....	5
2.2	Technical Support .....	6
2.3	ESD Precautions .....	6
3	System Description.....	7
4	Installation .....	8
4.1	Preparation.....	8
4.2	Wiring .....	8
4.2.1	General Guidelines .....	8
4.2.2	Ground Wire.....	8
4.2.3	Charging Cables / Cable Management System .....	8
4.2.4	Grounding .....	8
4.3	Physical Installation.....	9
4.4	Connecting AC (Utility) Power .....	12
4.5	DC Output Cable Installation .....	15
4.6	Checklist.....	16

**List of Tables**

Table 4-1	Utility and Wiring Information .....	12
Table 4-2	Output Characteristics for DVS .....	13

**List of Figures**

Figure 3- 1	Components of the Charging System .....	7
Figure 4- 1	AC Input Terminal Block .....	14
Figure 4- 2	Location of Chassis Ground Connector .....	14
Figure 4-3	DC Output Cable Installation .....	15

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****1 Getting Started**

Before you begin, take the time to familiarize yourself with the Cautions in Section 2, and read the installation instructions in Section 4 completely before you install your new DVS.

To get your system up and running quickly perform the following steps:




1. Ensure the DVS siting requirements are followed. (Sections 4.5)
2. Connect the 3 phase utility power to the DVS, and apply power to the DVS. (Sections 4.6)
3. Install the BMID on battery pack. (Sections 3)
4. Once the BMID is installed, the battery pack may be connected to the charger.
5. If your BMID does not come pre-configured, you will need to initialize the new BMID. (Refer to BMID programming Manual, document #06701)
6. Once the BMID has been properly programmed, the battery pack is ready to begin charging.

**2 Safety Precautions – Read before using**



The DVS is designed with the safety of the user as the highest priority. Installation must comply with all local codes, and the following safety precautions must be read and observed.

**2.1 Symbol usage**

Throughout this manual, take special note of the information marked with the following symbols:

 DANGER	Contains information about safety practices necessary to prevent personal injury or death.
 WARNING	Contains information about safety practices necessary to prevent fire or equipment overheating.
 DANGER	Contains information to prevent shock hazard or possible damage to the equipment during installation and service.

NOTE: Offers helpful information for installation or usage, but does not contain personnel or equipment safety related information.

 CAUTION BEFORE YOU BEGIN	<ul style="list-style-type: none"> <li>• Read all instructions and cautionary markings on the Industrial PosiCharge™ (DVS) Assembly.</li> <li>• Make sure you also read the IMPORTANT SAFETY INSTRUCTIONS below.</li> <li>• Be sure to leave these instructions with the installed unit for future reference.</li> <li>• Only qualified personnel should install, use or service this charger.</li> <li>• Read and understand these Manufacturer's instructions and your employer's safety practices manual.</li> </ul>
 DANGER	<b>ELECTRIC SHOCK CAN KILL:</b> Touching live electrical parts can cause fatal shocks or severe burns. The battery terminals are always electrically live, and the output circuit is live whenever the battery is connected or being charged. The input power circuitry and internal circuits are live whenever input power is on. An incorrectly installed or improperly grounded charger is a hazard.

- The unit must be grounded properly with a grounding conductor of size equal to or larger than that recommended by local electrical codes or the installation section of this manual.
- Do not touch the uninsulated portion of the output battery connector or an uninsulated battery terminal.
- Only qualified service personnel may remove the front or back panels on the DVS. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. Opening the system or attempted installation or repair by other than qualified service personnel voids the warranty.
- Disconnect battery charger from input power and battery connections before installing or servicing. Lockout/Tagout input power.
- Do not expose to rain or perform installation/service/repair work when in standing water.
- A Charge can be stopped by disconnecting the output cable connector or by pressing the stop button on the front panel. The DVS is designed to automatically stop a charge event to prevent arcing or burning of the charger connections in the event of a hot disconnect.

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**

- The charging cables must be sized for the full rated current of the DVS, and inspected frequently for wear, cuts and abrasion. Do not use worn, damaged, undersized, or poorly spliced cable.
- The DVS charging connector is subject to normal wear and tear, and may be damaged by misuse or abuse. Frequently inspect the connector for cracking, pitting of contacts, fraying of wires or signs of connector fatigue. A damaged charging connector should be replaced immediately.
- Do not install or place unit on, over or near combustible surfaces.
- Do not install unit near flammables.
- Do not block air intake or exhaust.
- Ensure that the Battery Monitor/Identifier (BMID) is properly installed according to the BMID installation instructions.
- Do not overload building wiring - be sure power supply system is properly sized, rated and protected to handle this unit. Use only on circuits provided with the minimum wire size specified in the installation section.
- Protective bollards or Armco barriers should be installed where charging equipment location is subject to damage from vehicle activity.
- Do not install unit where it will be exposed to direct sunlight.
- To avoid shock hazard, only install cables approved by PosiCharge™ for indoor use.
- Do not subject the cable or coupler to damage or stress. Do not step on the coupler cable.
- Do not hang from the coupler cable.
- Do not disassemble the DVS.

**2.2 Technical Support**

This manual is intended to provide an authorized, fully trained installation technician with the information and guidance necessary to safely install the DVS equipment. For assistance contact PosiCharge™ Customer Support at:

Tel.: 626-275-2991  
Email: [info@posicharge.com](mailto:info@posicharge.com)

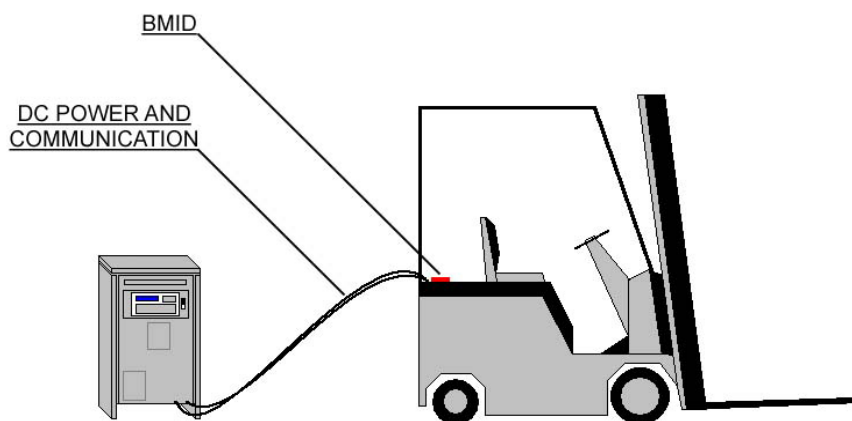
**2.3 ESD Precautions**

Electronic circuits are sensitive to damage from electrostatic Discharge. Persons servicing this equipment should be trained in proper techniques for avoiding ESD damage to electronic circuits. As a minimum, when handling circuit boards, wear an appropriate ESD wrist strap connected to the equipment chassis.

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****3 System Description**

The keypad and display provide the user interface to the charger. The display constantly updates the charger and battery status, and allows access to the programming menus through the keypad. Four (4) status LEDs indicate when a charge is in progress, at 80% complete, fully charged, or in equalization. A fault/warning LED serves to alert the user to fault conditions.

The DVS works with a small monitoring device mounted on the battery called the battery monitor/identifier (BMID). As shown in Figure 3- 1, when a vehicle equipped with a BMID connects to the charger, the charger communicates with the BMID to ensure optimal charging.



**Figure 3- 1 Components of the Charging System**

Typically, the battery dealer or another authorized service technician will install the BMID on the battery and configure it before delivery to the customer. BMIDs may also be configured on site through the charger front panel (see the "BMID Programming Manual").

Many different sizes and types of industrial battery packs may be charged with the DVS. Choose the correct BMID and BMID programming for the nominal voltage and size of your pack.



**WARNING**

**IMPROPER INSTALLATION CAN CAUSE FIRE**

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****4 Installation**

This section outlines the requirements and procedures for installing the DVS. Read the entire section before proceeding with installation, and make sure you have read and understood the warnings in Section 2. Installation should be completed by an experienced electrician and should conform to all relevant electrical codes.

**4.1 Preparation**Unpacking and Inspection

The DVS is provided fully assembled on a shipping pallet. It is surrounded by a protective shipping box. Remove the packaging and any other shipping materials prior to installation.

The following equipment is provided with each system:

- One DVS system
- DVS Installation Manual
- CD Manual

The following equipment is shipped to truck retrofit location

- One BMID system with related connectors
- One BMID thermistor kit
- The “BMID Programming” Manual

NOTE: Additional connector sets and BMID kits may be purchased from your authorized DVS Dealer.

**4.2 Wiring****4.2.1 General Guidelines**

- Check utility configuration tag on DVS to make sure that rated input voltage matches local utility voltage. See **Table 4-1** for details.
- See **Table 4-1** for Input/Output parameters.

**4.2.2 Ground Wire**

- Green or green with a yellow stripe and attached to the compression lug provided.

**4.2.3 Charging Cables / Cable Management System**

- To avoid shock hazard, only install cables approved by PosiCharge™ for indoor use. Use H01N2-D (EN 50272-3) or similar type.



DANGER

**CABLES CARRY HIGH POWER/CURRENT**

Damaged Cables and/or connectors can be a serious safety hazard.  
Cables must be secured with an Approved Cable Management System.  
Cables are to be kept off the floor.


**Failure to use a Cable Management System may invalidate Product Warranty.**

**4.2.4 Grounding**

- DVS must be connected to an equipment-grounding conductor routed with the circuit conductors. Connections must comply with all local codes and ordinances.
- The DVS must be grounded in accordance with the Facilities Utility grounding method.
- See Table 4-1 for wiring size and additional information.
- Use copper conductors only.
- Minimum ground wire size is listed. Refer to local electrical codes for reference.



**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****4.3 Physical Installation**

	DVS100	DVS150
DVS Weight	240kg (529lbs)	280kg (617lbs)
 <b>CAUTION</b>	Always use appropriate equipment for handling the unit. Use a forklift of sufficient capacity to lift the unit.  Do not use hooks to lift the unit.  Do not tip the unit. It must be kept in vertical position.	

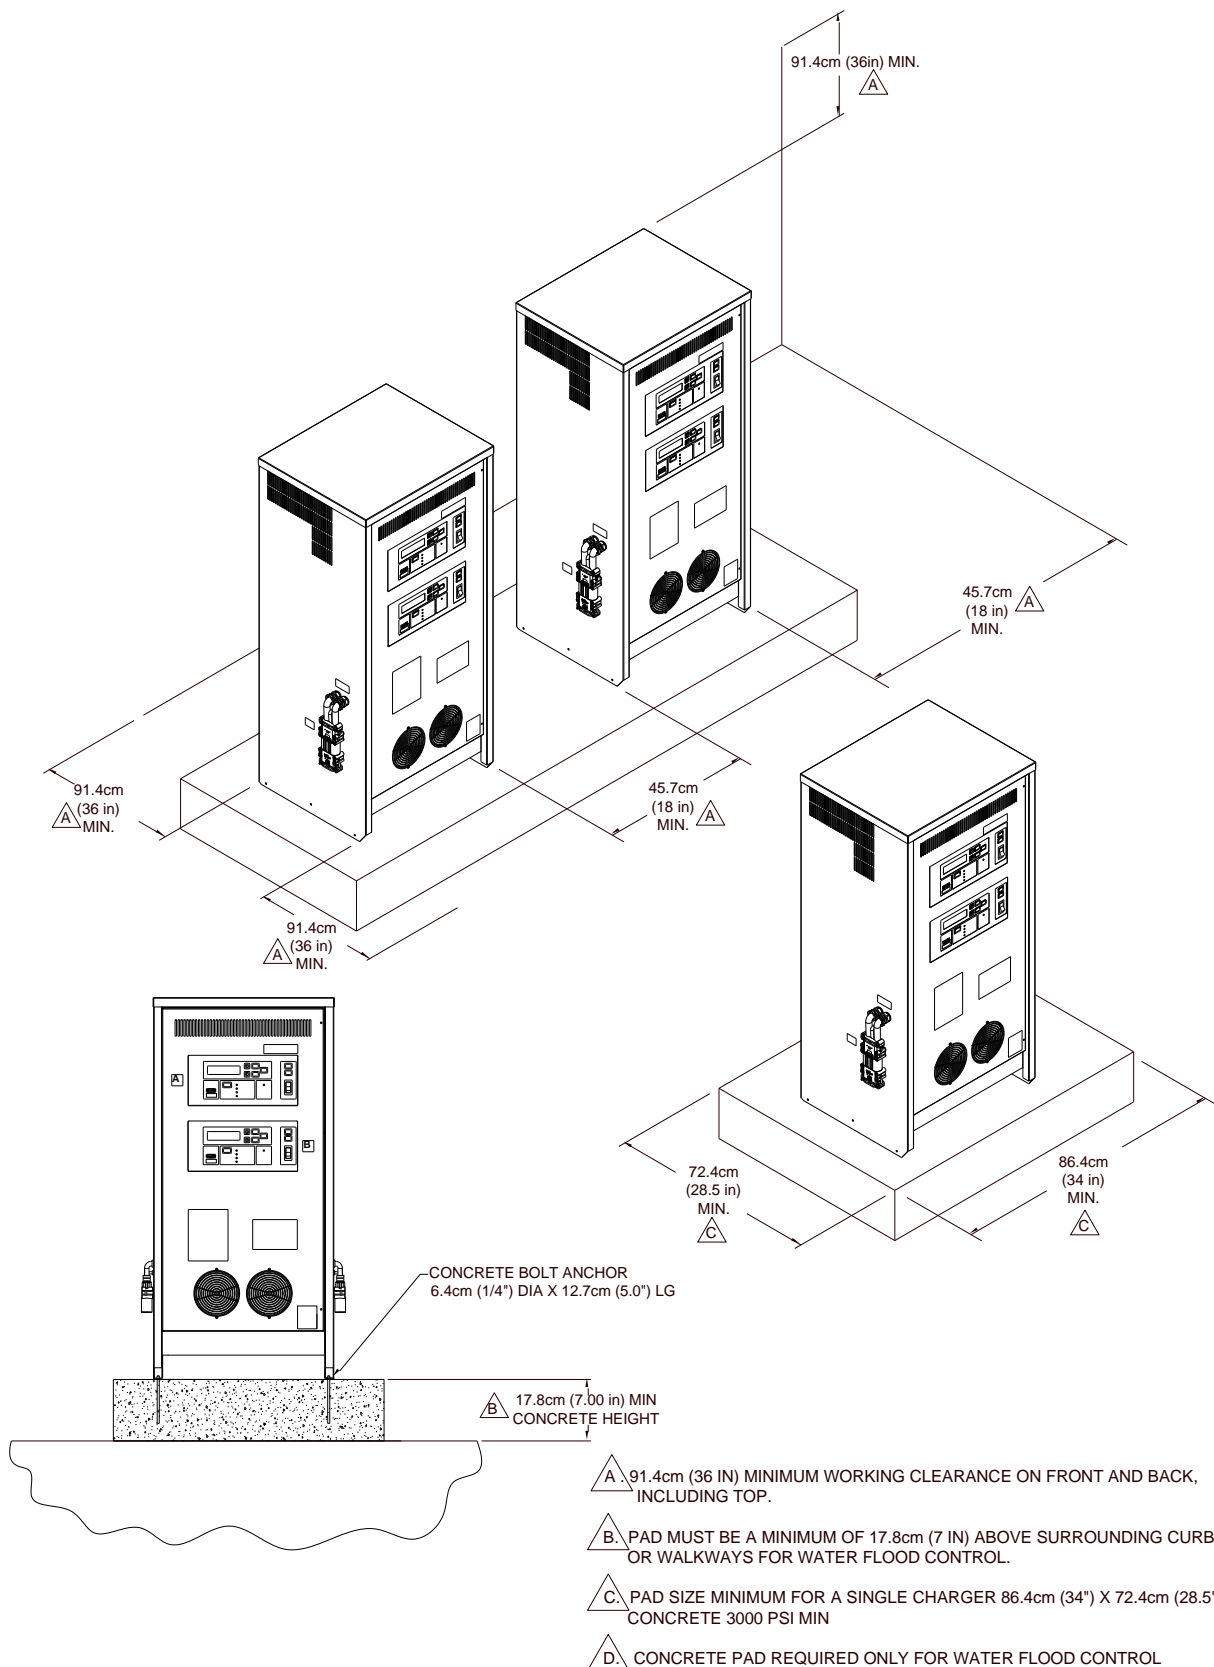
The external dimensions of the DVS-100 and DVS-150 are:

- Base: 51,9 x 62,3cm (20.44 x 24.5 in)
- Height: 130,7cm (51.47 in)

**Location**

Choose your installation location to:

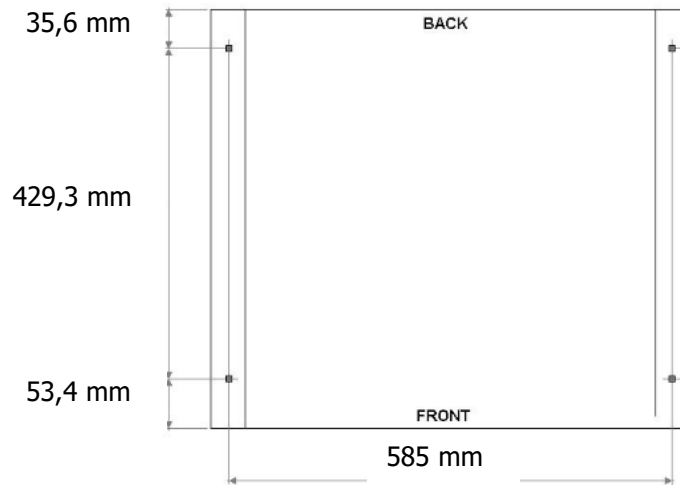
- Avoid temperature and humidity extremes.
- Minimize moisture and dust.
- Provide adequate air circulation to prevent the buildup of fumes.
- Install on a cement pad minimum 18cm (7") above surrounding curbing or walkways for water flood control, see Figure 4-1 and Figure 4-2.
- Maintain a minimum of minimum of 46cm (18") of clearance on the sides of the unit for proper ventilation.
- Maintain 91,5cm (36") minimum clearance on Front and Back for servicing as required by local codes.
- Do not install unit where it will be exposed to direct sunlight.

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****Figure 4-1 DVS-100 and DVS-150 Installation**

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**




NOTE: We strongly recommend cement curbing, concrete filled steel pipe pillars, or similar protection to be placed around the DVS to prevent damage to the DVS from a moving vehicle.

The square mounting holes are 6.5mm X 6.5 mm.



**Figure 4-2 Bolt Pattern for DVS100 and DVS150 Installation**

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****4.4 Connecting AC (Utility) Power**

 CAUTION	Prior to connecting the unit to the utility ensure that: <ul style="list-style-type: none"> <li>• The available grounding connection meets all state and local codes.</li> <li>• The main circuit breaker or other "line disconnect" device is within sight of the unit and is easily accessible to allow complete power down of the unit.</li> </ul>
 DANGER	Incorrect power wire installation, or failure to properly ground unit may result in a severe shock hazard.
 CAUTION	Use Copper conductors only.

Utility power lines to DVS must be provided from an appropriately rated utility distribution panel. The utility distribution panel must include a "branch" rated circuit breaker (CB). The CB may also be the "line disconnect" device. Utility power must be 60Hz, 3 phase, 3 wire plus ground. See Table 4-1 for information on input current, utility requirement, and cable sizes. All phase wires must be rated for the full input AC current as listed.

**Table 4-1 Utility and Wiring Information**

	DVS100 2 x10kW		DVS150 2 x 15kW	
	400-415V $\pm$ 10%	440 $\pm$ 10%	400-415V $\pm$ 10%	440 $\pm$ 10%
Input voltages				
Input AC Current at rated load (Amps)	32A at 400V	30A at 440V	50A at 400V	40A at 440V
Input Frequency (Hz)	50 / 60 Hz		50 / 60 Hz	
Number of input Phases (Excluding Ground)	3		3	
Maximum Circuit Breaker Rating - Select per local electrical code	D-characteristic	D-characteristic	D-characteristic	D-characteristic
Minimum Disconnect Switch Voltage Rating (VAC)	600V		600V	
Minimum Inrush Current Capacity (Amps)	250A		300A	
THD Max	35%		35%	
Minimum Input Conductor Size	10 mm <sup>2</sup>		16 mm <sup>2</sup>	
Minimum Ground Wire Terminal Torque	4-5 Nm		4-5 Nm	
Output Cable Connector	320A Euro		320A Euro	

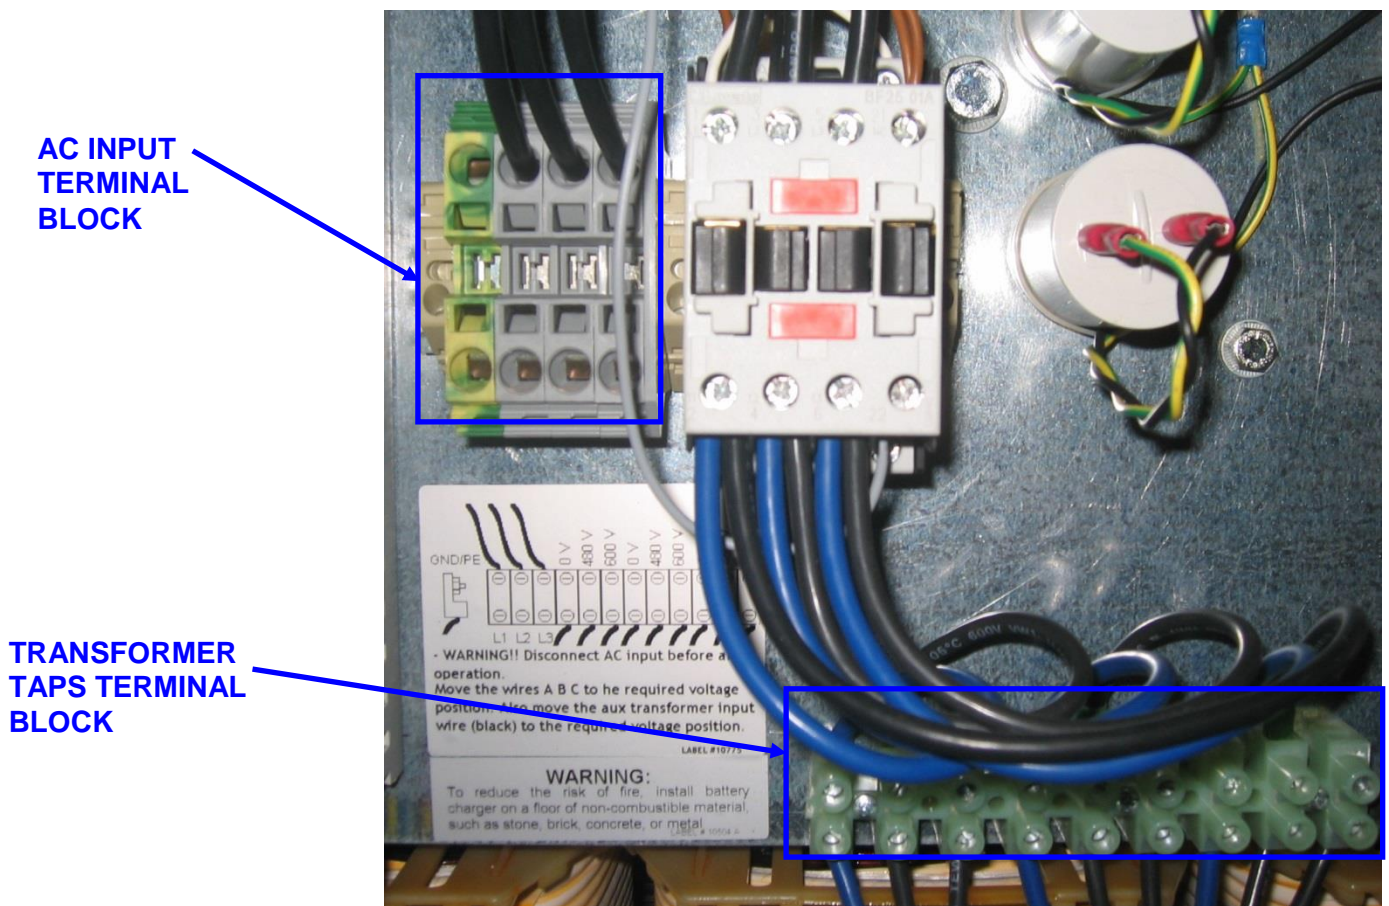
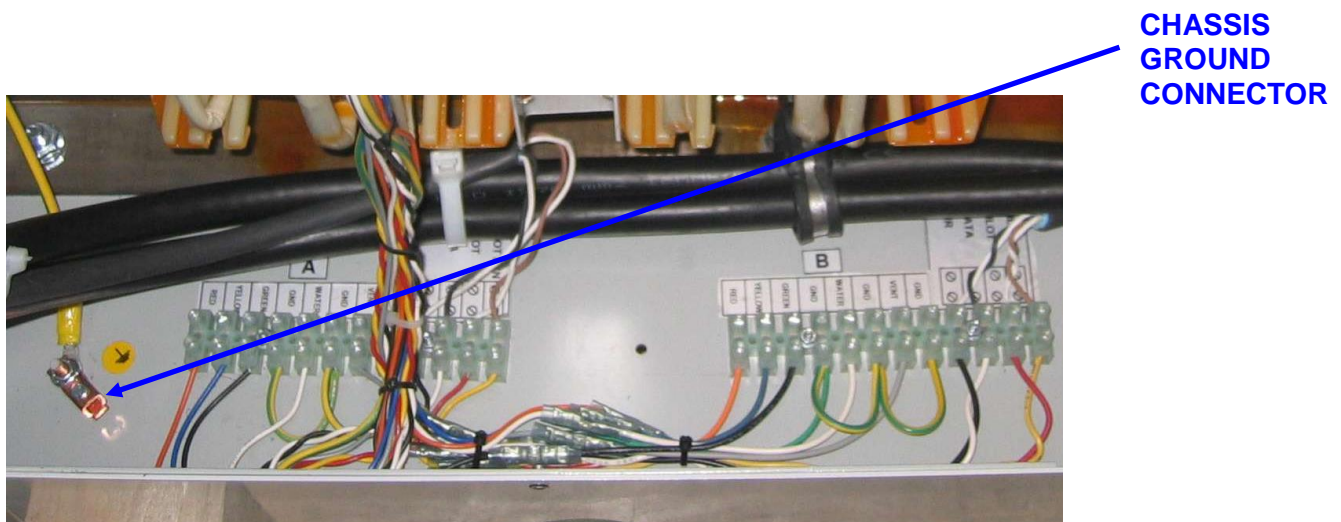
**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****Table 4-2 Output Characteristics for DVS**

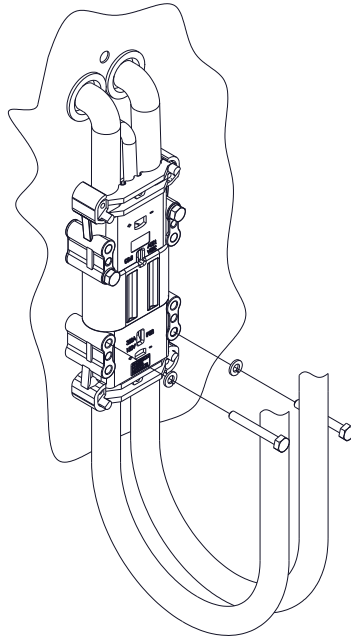
Configuration	DVS100	DVS150
Max Output Power (kW)	2 X 10 kW	2 X 15 kW
Max Output DC Range (Volts)	16-120V	16-130V
Max Output DC Current (Amps)	200A	300A
Minimum Output Wire Size (DC BUS +)	2 X 70mm <sup>2</sup>	2 X 95mm <sup>2</sup>
Minimum Output Wire Size (DC BUS -)	2 X 70mm <sup>2</sup>	2 X 95mm <sup>2</sup>

Installation / Line Voltage Instructions (400-415VAC)

1. Remove the screws and open the front door of the DVS.
2. Locate the AC Input Terminal Block and the Chassis Ground Connector. Refer to Figures 4-5 thru 4-10.
3. Bring utility wires from the Utility Distribution Panel through conduit, and route them to the AC Input Terminal Block and the Chassis Grounding Connector. Refer to Figures 4-5 thru 4-10.  
NOTE: The grounding wire should have insulation that is green or green with yellow stripe.
4. Close the front door prior to switching on the utility power.

**WARNING****ENSURE GOOD ELECTRICAL CONNECTION BY TIGHTENING ALL THE SCREWS PROPERLY**

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****Figure 4- 1 AC Input Terminal Block****Figure 4- 2 Location of Chassis Ground Connector**

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****4.5 DC Output Cable Installation****Figure 4-3 DC Output Cable Installation**

To install output cable(s):

1. Install output cable(s) ensuring mounting screws and lock washers are properly installed and tightened. **Recommended torque: 8.47 Nm (75 in-lbs)**
2. *Proper Cable management system is required to relieve stress concentration from output connector mounting hardware areas*

**Note:** 1) *Do not remove connector key(s) from Connector*  
2) *Minimum bend radii 9cm (3.5 inch) are required for output cables*

**IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS****4.6 Checklist**

DVS - INSTALLATION AND OPERATIONAL CHECKOUT				
DVS	DVS	DVS	DVS	
Serial #	Serial #	Serial #	Serial #	
V _ _ _	V _ _ _	V _ _ _	V _ _ _	VERIFY AND RECORD SW VERSION
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK UNIT IS SECURELY MOUNTED
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK AC CIRCUIT BREAKER RATING DVS100 RATING IS 32 AAC @ 400-415VAC DVS150 RATING IS 63 AAC @ 400-415VAC DVS100 RATING IS 30 AAC @ 440VAC DVS150 RATING IS 57 AAC @ 440VAC
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	UTILITY CONNECTIONS PROPERLY INSTALLED WITH ALL FASTENERS TIGHTENED: CHECK AC TERMINAL BLOCK CHECK CHASSIS GND CONNECTOR CHECK INPUT AND OUTPUT WIRES OF AC CONTACTOR ARE SECURE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ALL DC BUS CONNECTIONS PROPERLY INSTALLED WITH ALL FASTENERS TIGHTENED: CHECK DC OUTPUT NEGATIVE CHECK DC OUTPUT POSITIVE CHECK DC FUSE CHECK SHUNT RESISTOR
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK OUTPUT CABLE STRAIN RELIEFS ARE SECURED.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	BMID COMMUNICATION WIRING IS SECURE AND PROPERLY CONNECTED
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK DC POWER SUPPLY CONNECTION
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK CONTROLLER BOARD CONNECTORS ARE SECURELY AND PROPERLY INSTALLED.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	CHECK BASSI CONTROLLER BOARD CONNECTORS ARE SECURELY AND PROPERLY INSTALLED.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	FRONT PANEL LED's WORK PROPERLY
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	DISPLAY IS FULLY OPERATIONAL
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ALL FRONT PANEL CONTROL BUTTONS ARE FUNCTIONAL
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	LATEST APPLICATION CODE HAS BEEN LOADED
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ALL SCREWS AND WASHERS PROPERLY INSTALLED ON DOOR AND BACK PANEL
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	VERIFY DVS CHARGES PROPERLY WHEN CONNECTED TO VEHICLE
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	ALL HIGH CURRENT CABLES IN CHARGING PATH ARE SECURELY FASTENED

SYSTEM CHECKED BY – NAME / SIGNATURE	/	DATE:	
CUSTOMER / LOCATION	/	DATE:	