


BMID I Installation Manual

Battery Management Tool

BMID I

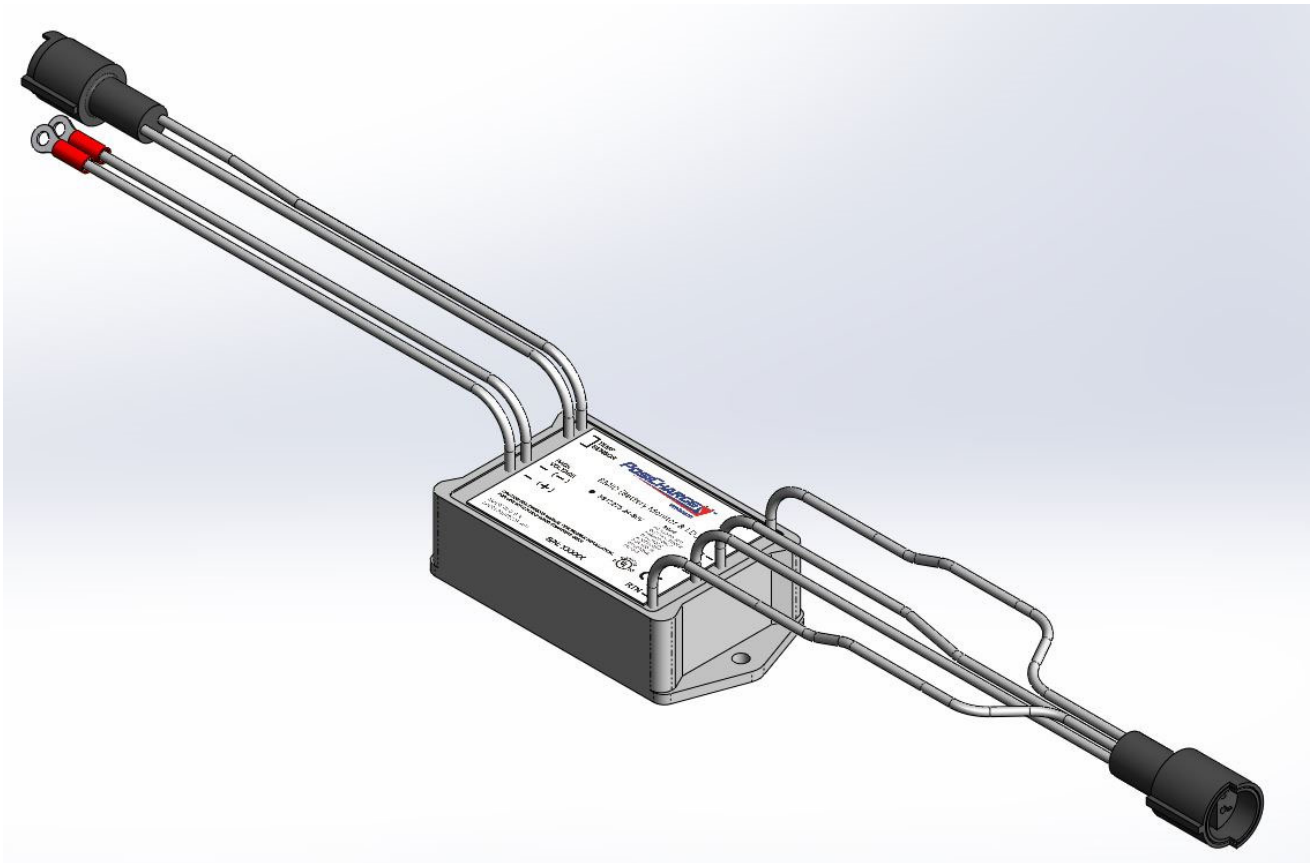

Rev Feb 2023

These commodities, technology, or software were exported from the United States in accordance with the Export Administration Regulations. Diversion contrary to US law prohibited.

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**PLEASE NOTE:**

Webasto Charging Systems, Inc., the Webasto logo, PosiCharge™, and the PosiCharge logo are trademarks of Webasto Charging Systems, Inc.

WEBASTO PROPRIETARY INFORMATION: This manual contains information that is confidential and proprietary to Webasto Charging Systems, Inc. (“Webasto”), constitutes “Confidential Information,” and is subject to Non-Disclosure Agreements. The intended users of this manual are service technicians certified by Webasto's installation network. This manual shall not be disclosed in whole or in part to any other party without Webasto’s prior written permission. Each recipient's acceptance of this manual and use of the information contained herein shall be deemed to be an acceptance of this non-disclosure obligation.

This BMID Installation Manual includes the latest information available at the time of printing. Webasto Charging Systems, Inc. reserves the right to make changes to this product without further notice. Changes or modifications to this product by other than an authorized service provider could void the product warranty.

© 2019 Webasto Charging Systems, Inc. All rights reserved. No portion of these materials may be duplicated, used or disclosed without prior written permission from Webasto Charging Systems, Inc.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This product has been designed to protect against Radio Frequency Interference (RFI). However, there are some instances where high powered radio signals or nearby RF producing equipment (i.e. digital phones, RF communications equipment, etc.) could affect operation.

If interference to your charge station is suspected, Webasto recommends the following steps be taken prior to contacting customer support for assistance.

1. Relocate nearby electrical appliances or equipment during charging.
2. Turn off nearby electrical appliances or equipment during charging.

**WARNING**

Changes or modifications to this product by other than an authorized service provider could void FCC compliance.

Save These Instructions

This document is your guide to installation and use of the PosiCharge BMID products. The installation examples shown are for batteries in material handling and tug/tow vehicles.


IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**CONTENTS**


1	BMID INSTALLATION	4
2	INSTALLATION PROCEDURE	5
2.1	Flooded Batteries	5
2.2	Sealed Batteries	5
2.3	Welded Battery Terminal Posts	6
2.4	Bolted Battery Terminal Posts	6
3	BMID INITIALIZATION	9
3.1	BMID Initialization Procedure	9
4	COMMUNICATION WIRING	11
4.1	Single Anderson Euro Connector Communication Wiring, Battery Side.....	11
4.2	Single Schaltbau Euro Connector Communication Wiring, Battery Side	11
4.3	Dual SBX Connector Communicating Wiring, Charger and Battery Side	12
4.4	Dual Anderson Euro Connector Communication Wiring, Battery Side	12


IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS


1 BMID Installation

This manual describes the installation of the Battery Monitor and ID module (BMID) on a battery compatible with a Webasto PosiCharge charger. The BMID is located on the forklift battery pack to monitor the condition of the pack and to communicate the type of battery to the charger.

 CAUTION	An improperly installed BMID may cause the charger to charge incorrectly, and may void your battery warranty.
---	---

 DANGER	Electric shock hazard. Only trained personnel should install or maintain this equipment.
--	--

 CAUTION	BMIDs are installed on electrically live battery packs. Use insulated tools and DO NOT touch bare terminals of the battery with your hands.
---	---

 DANGER	Hydrogen gas may be present in battery compartments. Be sure to work on equipment only in a well ventilated environment.
--	--

BMID Installation Kits	
Part Number	Description
26131	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, BASIC
26132	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, ANDERSON
26133	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, SCHALTBAU
26134	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, SEALED BATTERY
26135	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, DUAL SBX
26136	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, GSE BURTON
26509	KIT, UNIVERSAL INSTALL, BATTERY MONITOR, ANDERSON COMM & TEMP SENSOR

Please contact an authorized PosiCharge sales representative for kit details.

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

2 Installation Procedure

First select one of the center cells in the pack as an installation location (typically the hottest cell). Secure the BMID to a nearby intercell connect with the provided polypropylene cable ties and foam tape.

2.1 Flooded Batteries

Select one of the battery cells near the BMID where the temperature sensor will be installed. This cell should be in the center of the pack so that it will read the warmest temperature. Carefully drill a 0.5-inch hole in the center of the case of the cell. Insert the submersion type temperature probe through the case and submerge it into the electrolyte.

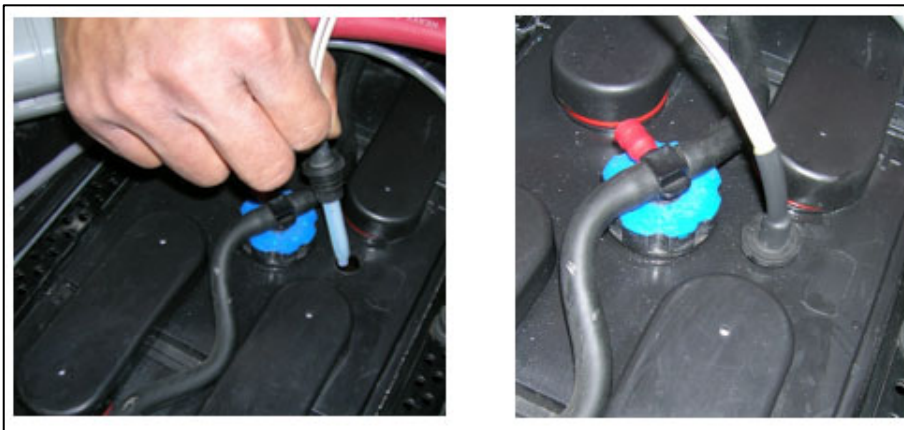




Figure 1 – Temperature Sensor Installation

<p> WARNING</p>	<p>Use only the submersion-type temperature probe with flooded batteries. Do not use the non-submersion type, black plastic temperature sensor, as it is not designed for liquid electrolyte cells.</p>
---	---

2.2 Sealed Batteries


Select one of the battery cells near the BMID where the temperature sensor will be attached. It is very important to read the actual temperature of the battery. Using the non-submersible black plastic temperature sensor, slide the probe between two cells. This is the preferred method. If it does not fit between the cells, it can be placed under the battery post.

<p> CAUTION</p>	<p>The temperature probe is fragile. Take extra care not to damage it during installation. Also, select a location it will not be damaged during normal operation or maintenance.</p>
---	---


Route the voltage sensing lines to the positive (red wire) and the negative (black wire) terminals of the battery.

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**2.3 Welded Battery Terminal Posts**

Remove the plastic covers from the terminals. Install knurled brass inserts (Part # 06602) into the pack's positive and negative lead terminals of the battery pack – it must be the same posts which the main positive and main negative power cables attach to the pack. Drill a 0.188-inch diameter hole in the center of the lead post, between 0.290 to 0.353 inch deep (drill bit supplied in assembly kit). Press the knurled brass insert into the hole. Use the #6 screw, flat washer, and lock washer to attach the BMID voltage wires to the knurled insert. Apply a small amount of terminal protective grease to completely encapsulate the screw and ring lug of both the + red and –black terminals. Replace the plastic terminal covers.

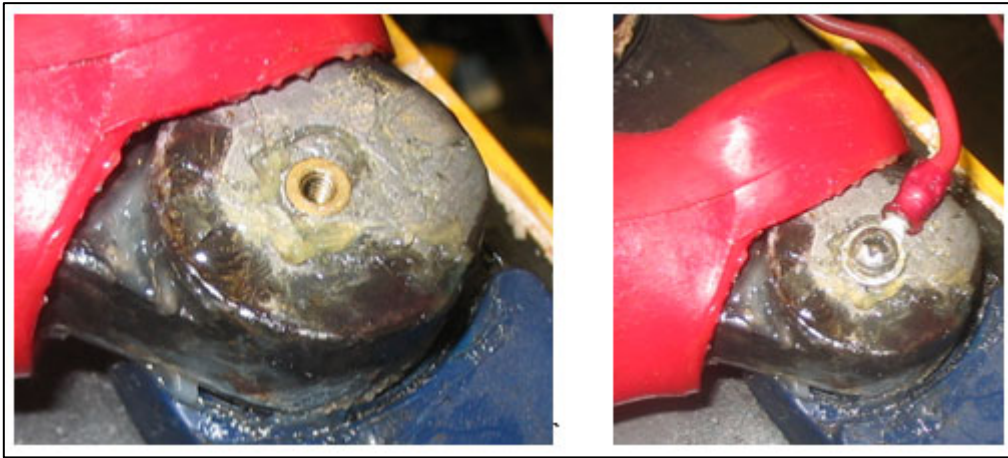**Figure 2 – Knurled Brass Insert Installation****2.4 Bolted Battery Terminal Posts**

Use the same procedure as above except install the brass insert in the center of the terminal bolt head. After applying the grease, snap the caps onto the bolt head to insulate the connection.

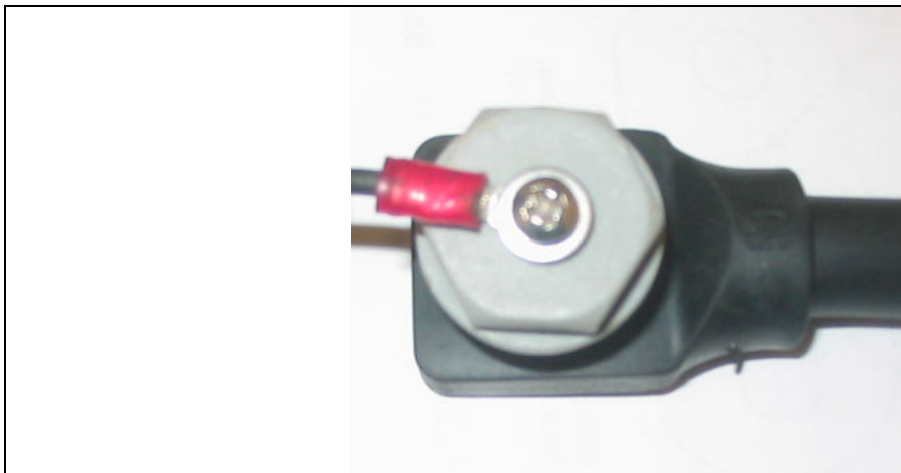**Figure 3 – Bolted Battery Installation**

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

Neatly bundle any excess wire length and fasten it securely to the battery using polypropylene cable ties. Confirm all the wires are routed to prevent chafing or snagging during normal operation and maintenance. Then secure all of the BMID communication lines to intercell connects along their path with the provided cable ties. Use polypropylene cable ties only – nylon cable ties are vulnerable to sulfuric acid attack. Figure 4 shows a typical installation of the BMID in a single connector pack. Figure 5 shows a typical installation of the BMID in a double connector pack.

Connect the BMID data line receptacle to the mating plug on battery patch cable. (Figure 4 & Figure 5)

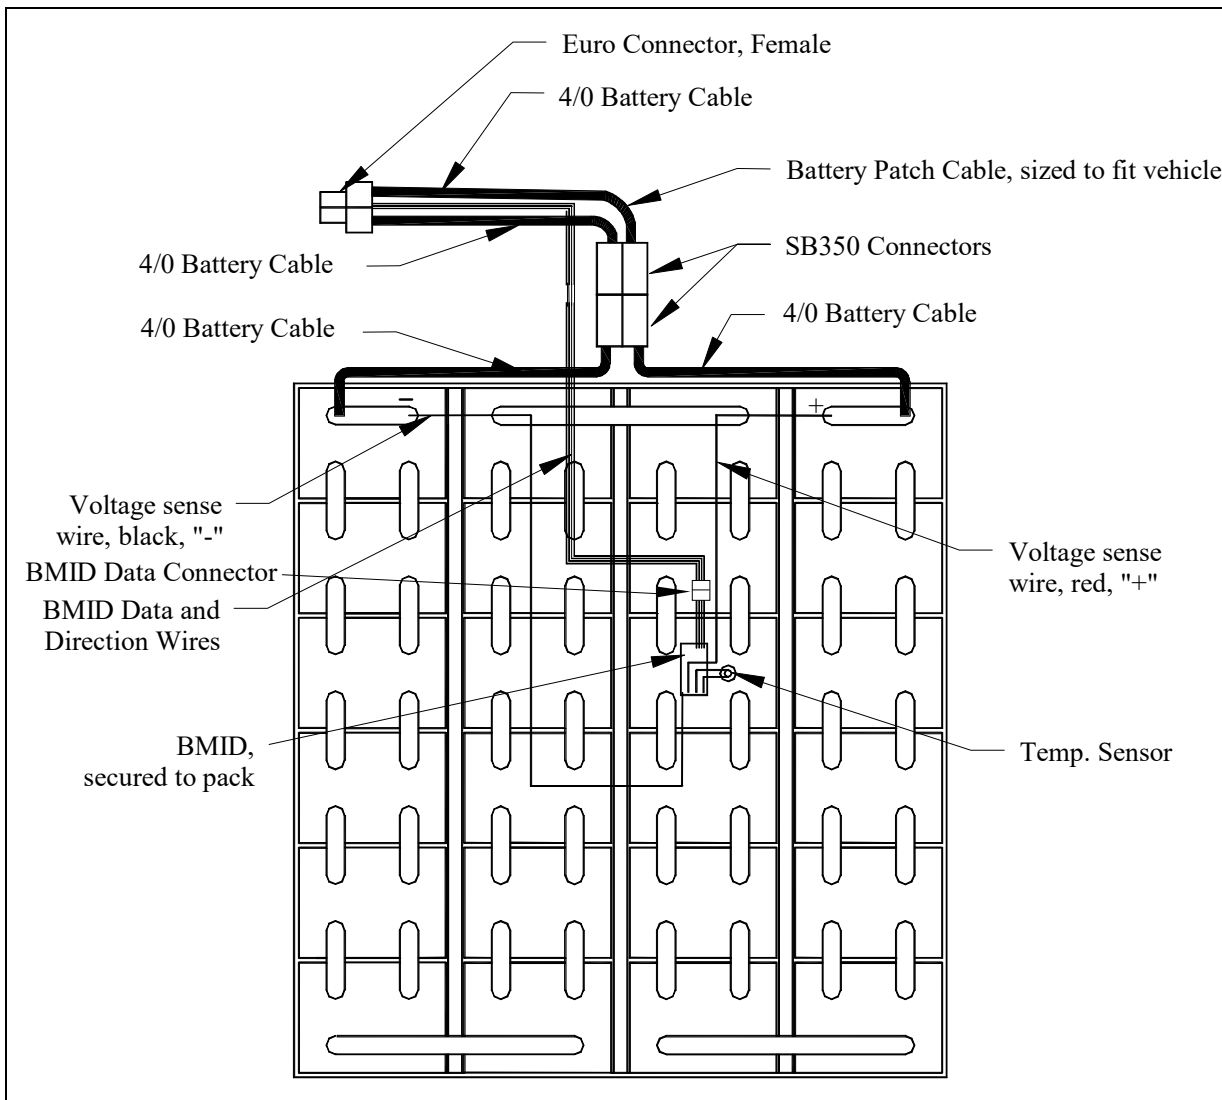


Figure 4 - Typical BMID Installation on a Single Connector Battery Pack

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

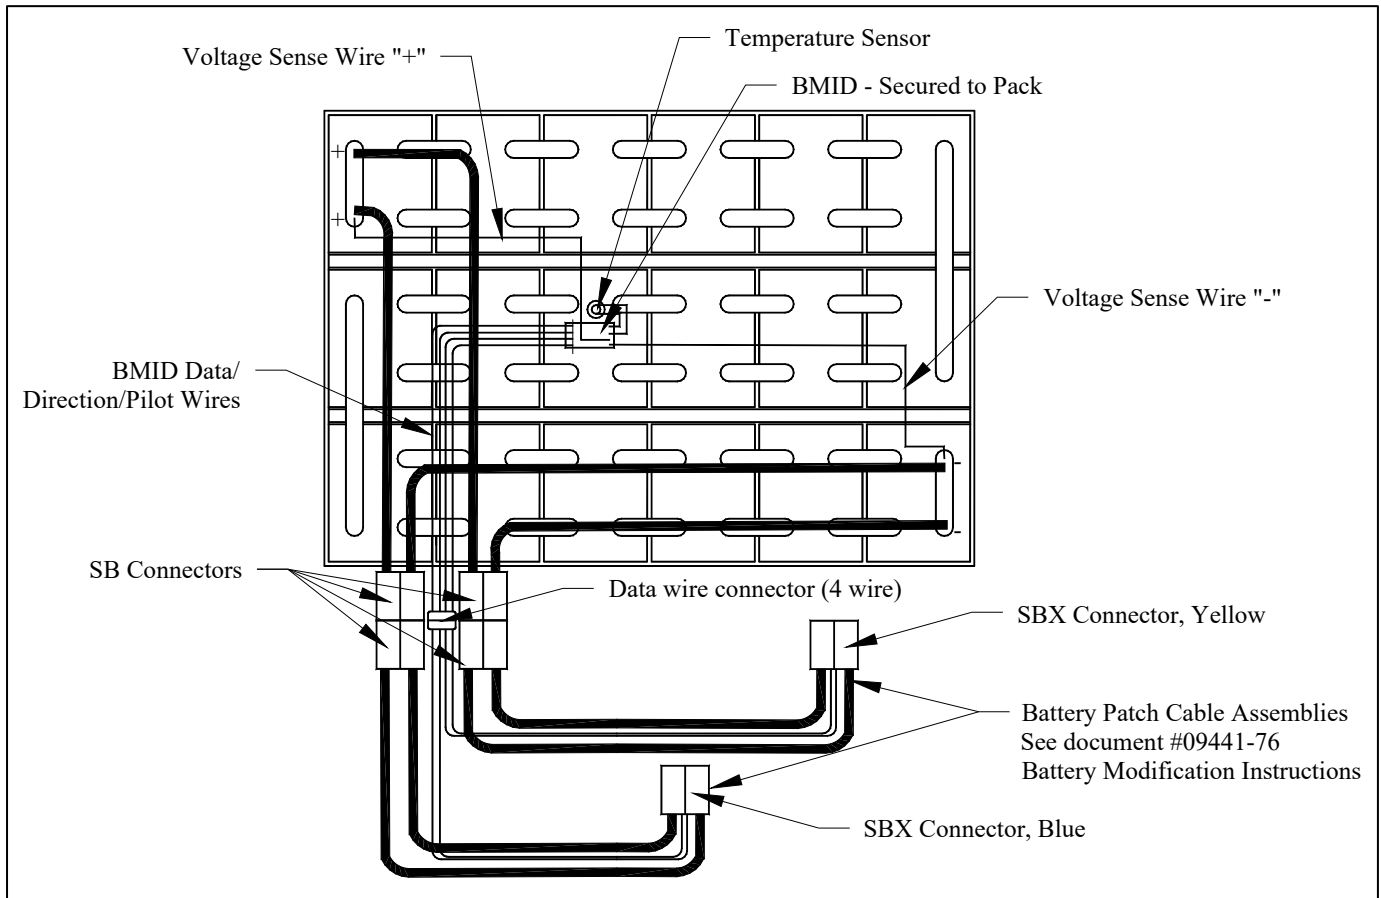


Figure 5 - Typical BMID Installation on a Dual SBX Battery Pack

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS**3 BMID Initialization**

NOTE: When using BMID Is with Procore chargers, skip the initialization step.

Before a battery can be charged, the BMID must be initialized and the battery parameters written to the BMID. This is done the first time the battery is connected to a PosiCharge fast charger. At a minimum, the following parameters must be entered:

1. Battery ID
2. Battery type - Choose from a list of batteries by manufacturer
3. Number of cells
4. Battery capacity in AHrs
5. Vehicle ID is optional.

Equalization is scheduled for Sundays by default. Enter the EQ start and end days and times if another scheduled is required.

Use the default settings for the other parameters unless instructed otherwise by PosiCharge.

**3.1 BMID Initialization Procedure**

WARNING: This procedure deletes all warranty data and should **ONLY** be performed on new BMIDs when they are first placed into service.

1. Press the **Select** button until *BMID Configuration* is displayed, then press the **Enter** button.
2. The *Enter Key Code* will be displayed – enter the initial key code by pressing the **Enter** and **Down Arrow** buttons until *Key Code Accepted* is displayed on the screen, followed by *Initialize BMID*.
3. Press the **Select** button until *Initialize Date* is displayed.
4. Enter the secondary key code (**Up Arrow** and **Down Arrow** for 10 seconds). There will be no indication that the key code has been accepted.
5. Press the **Select** button until *Initialize BMID* is displayed, the press the **Enter** button.

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

6. *Erase all BMID data?* is displayed with *Cancel* flashing – press the **Up Arrow** or **Down Arrow** button to change *Cancel* to *OK*. Then press the **Enter** button.
7. *Initializing BMID – please wait...* is displayed followed by *BMID Initialization OK* and *Battery ID*.
8. The default Battery ID type is 8 alphanumeric characters. Some older PosiCharge software does not support alphanumeric and requires a 5-digit numeric Battery ID. If a 5-Digit Numeric ID is required, press the **Select** button until the Battery ID Type is displayed, then press **Enter**, and use **Up Arrow** or **Down Arrow** keys to toggle between *Alphanumeric Batt ID* and *5-Digit Numeric*. Then press **Enter** to accept.
9. Press the **Enter** button and input the Battery ID.

NOTE: If the Charger did not accept the secondary key code, pressing the **Enter** button at the Battery ID screen will cause *Access Denied* to display. Return to the *Initialize Date* screen, enter the secondary key code again, and proceed with step 5 above.

10. Enter the remaining BMID parameters.

NOTE: The BMID S/N is not editable. The Initialize Date parameter is automatically set to the date configured in the charger and is not editable.

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

4 Communication Wiring

4.1 Single Anderson Euro Connector Communication Wiring, Battery Side

The communication wiring provides the safety interlock signal (called the pilot), the communication between the BMID and the charger. The communication wiring must be connected properly for the charger to initiate a charge.


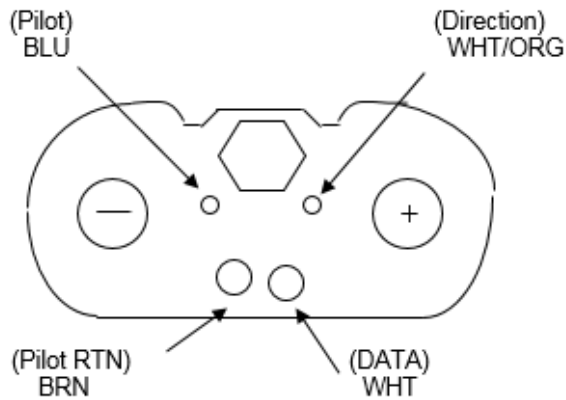


Figure 6 - Wiring for Anderson Euro A32

4.2 Single Schaltbau Euro Connector Communication Wiring, Battery Side

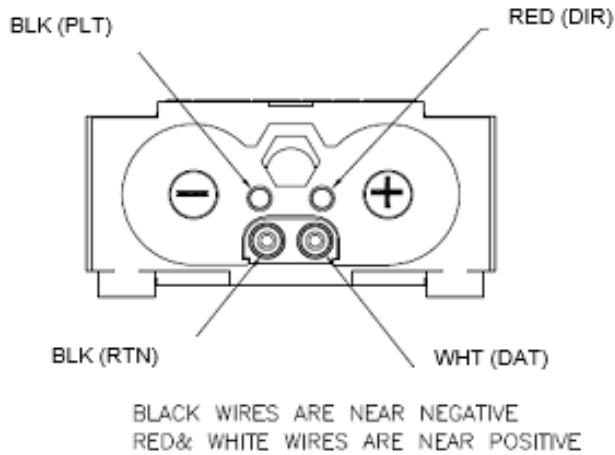

FRONT VIEW OF CONNECTOR

Figure 7 - Wiring for Schaltbau Euro LV320

IMPORTANT INFORMATION – SAVE THESE INSTRUCTIONS

4.3 Dual SBX Connector Communicating Wiring, Charger and Battery Side

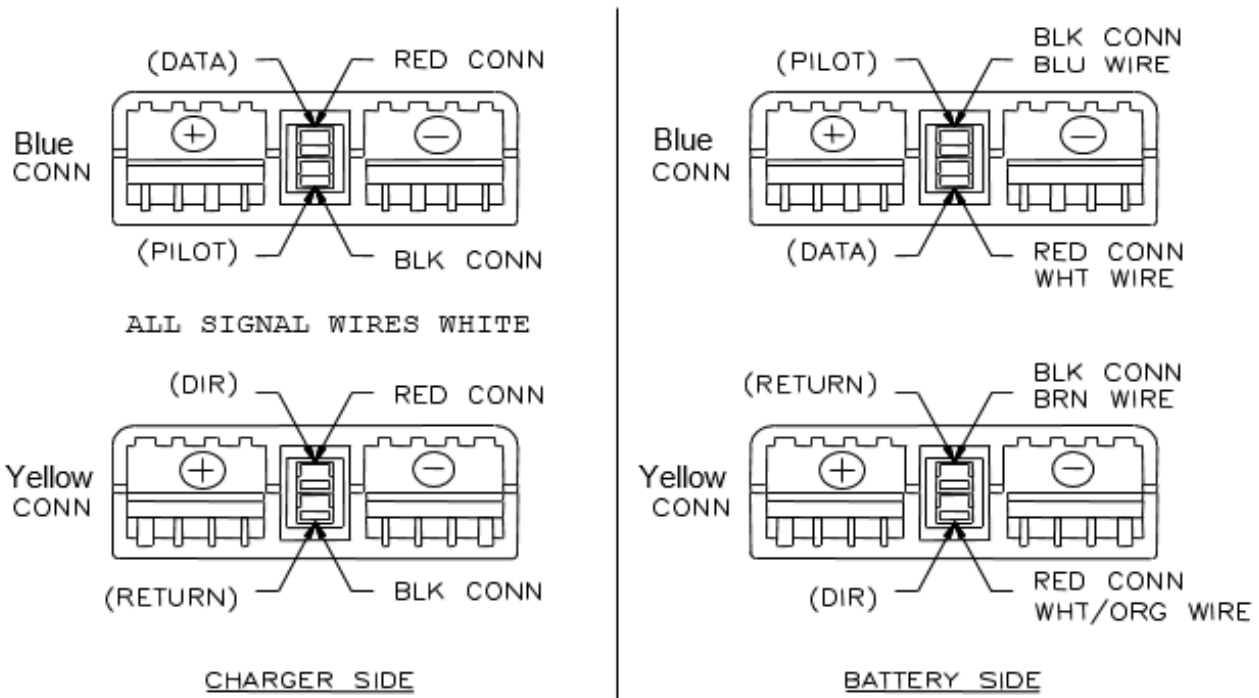


Figure 8 – Wiring for Dual SBX 320 Connector

4.4 Dual Anderson Euro Connector Communication Wiring, Battery Side

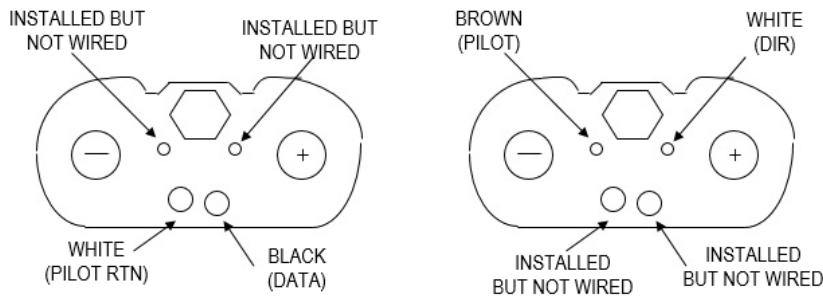


Figure 9 - Wiring for Dual Anderson Euro